

BLACKSTONE®

OWNER'S MANUAL

BLACKSTONE PATIO OVEN MODEL# 1575



FOR OUTDOOR USE ONLY



Please read manual carefully before assembly
Retain this manual for future reference

 **DANGER**

If you smell gas:

1. Shut off gas to the appliance.
2. Extinguish any open flame.
3. If odor continues, keep away from the appliance and immediately call your gas supplier or your fire department.

 **WARNING**

1. Do not store or use gasoline or other flammable liquids or vapors in the vicinity of this or any other appliance.
2. An LP cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.

WARNING:

Before proceeding, make certain that you understand the IMPORTANT INFORMATION section of this manual.

Hazardous fire or explosion may result if instructions are ignored.

It is the consumer's responsibility to see that the Pizza Oven is properly assembled, installed, and maintained. Failure to follow the instructions in this manual could result in bodily injury and/or property damage.

FOR YOUR SAFETY IF YOU SMELL GAS:

1. Turn off gas supply at tank.
2. Extinguish all open flames; do not operate any electrical appliances.
3. Ventilate the area.
4. Check for leaks as detailed in this manual.

PRECAUTIONS:



1. Leak test all connections after each tank refill.
2. Never check for leaks with a match or open flame.
3. Do not store gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
4. Any LP cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.
5. Do not store a spare LP-gas cylinder under or near this appliance.
6. Never fill the cylinder beyond 80 percent full.
7. If the information in the above two statements is not followed exactly, a fire causing death or serious injury may occur.
8. Do not operate Pizza Oven any closer than 36 inches from any combustible construction, including walls and ceilings.
9. Do not use this appliance under overhead combustible surfaces.
10. The regulator used in this unit is ZHENDAR T3. If this regulator fails, it must be replaced with the exact model and must only be replaced by a professionally licensed, authorized dealer.

Installation Safety Precautions

- Use Pizza Oven, as purchased, only with LP (propane) gas and the regulator/valve assembly supplied.
- Pizza Oven installation must conform with local codes, or in the absence of local codes, with either the National Fuel Gas Code, ANSI Z223.1/ NFPA 54, Natural Gas and Propane Installation Code, CSA B149.1, or Propane Storage and Handling Code, B149.2, or the Standard for Recreational Vehicles, ANSI A 119.2/NFPA 1192, and CSA Z240 RV Series, Recreational Vehicle Code, as applicable.
- Pizza Oven is not for use in or on recreational vehicles and/or boats.
- This Pizza Oven is safety certified for use in the United States and/or Canada only. Do not modify for use in any other location. Modification will result in a safety hazard.



Safety Symbols

The symbols and boxes shown below explain what each heading means. Read and follow all of the messages found throughout the manual.

 **DANGER** 

If you smell gas:

1. Shut off gas to the appliance.
2. Extinguish any open flame.
3. If odor continues, keep away from the appliance and immediately call your gas supplier or your fire department.

 **WARNING** 

1. Do not store or use gasoline or other flammable liquids or vapors in the vicinity of this or any other appliance.
2. An LP Tank not connected for use shall not be stored in the vicinity of this or any other appliance.

Call the BLACKSTONE Griddle Information Center for Help and Parts

Missing Parts? Assembly Questions?
Operation Problems?

Before returning Pizza Oven to store, call (435) 252-3030 or email us at support@blackstoneproducts.com



Model Number _____

Serial Number _____

Date Purchased _____

To Installer/Assembler: Leave these instructions with consumer.



To Consumer: Keep this manual for future reference.

 **CAUTION** 



Some parts may contain sharp edges, especially as noted in these instructions.
Wear protective gloves if necessary.

 **CAUTION** 

For residential use only. Do not use for commercial cooking.

 **DANGER** 



DANGER: Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

 **WARNING** 

WARNING: Be alert to the possibility of serious bodily injury if the instructions are not followed. Be sure to read and carefully follow all of the messages.

 **CAUTION** 

CAUTION: Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

 **CALIFORNIA PROPOSITION 65 WARNING** 

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. (California law requires this warning be given to customers in the State of California.) For more information: www.watts.com/prop65

TABLE OF CONTENTS

For Your Safety.....	2-3
Use and Care.....	5-10
ILLUSTRATED PARTS LIST.....	11-13
ASSEMBLY.....	14-21
USING AND TUNING	22
CARE AND MAINTENANCE.....	23
WARRANTY.....	24
CUSTOMER SERVICE.....	25
Reordering Parts.....	25
Contact Info.....	25

GRILL WARRANTY

12 months full warranty on Pizza Oven parts

If this pizza oven fails due to a defect in material or workmanship within one year from the date of purchase, call **(435) 252-3030** to arrange for replacement parts.

Please retain a copy of your proof of purchase to validate your warranty. You may be requested to send in a copy of your receipt to confirm any warranty requests.

Five - years after service

For five years from the date of purchase, you can call **(435) 252-3030** for help free of charge, with assembly or operation questions.

After the first year from the date of purchase, or if a valid proof of purchase cannot be provided, you can purchase replacement parts call **(435) 252-3030**. (Part purchase price with shipping and handling to be paid by customer.)

All warranty coverage excludes ignitor batteries and pizza oven part paint loss, discoloration or surface rusting, which are either expendable parts that can wear out from normal use within the warranty period, or are conditions that can be the result of normal use, accident or improper maintenance.

All warranty coverage is void if this pizza oven is ever used for commercial or rental purposes.



DANGER




- NEVER store a spare LP cylinder under or near the appliance or in an enclosed area.
- Never fill a cylinder beyond 80% full.
- If the information in the two points above is not followed exactly, a fire causing death or serious injury may occur.
- An overfilled or improperly stored cylinder is a hazard due to possible gas release from the safety relief valve. This could cause an intense fire with risk of property damage, serious injury or death.
- If you see, smell or hear gas escaping, immediately get away from the LP cylinder and appliance and call your fire department.

LP Tank Removal, Transport And Storage

- Turn OFF all control knobs and LP tank valve. Turn coupling nut counterclockwise by hand only - do not use tools to disconnect. Lift LP tank wire upward off of LP tank collar, then lift LP tank up. Install safety cap onto LP tank valve. Always use cap and strap supplied with valve.

Failure to use safety cap as directed may result in serious personal injury and/or property damage.

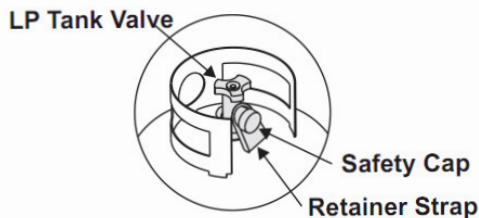

- A disconnected LP tank in storage or being transported must have a safety cap installed (as shown). Do not store an LP tank in enclosed spaces such as a carport, garage, porch, covered patio or other building. Never leave an LP tank inside a vehicle which may become overheated by the sun.
- Do not store an LP tank in an area where children play.

LP Tank

- The LP Tank used with your grill must meet the following requirements:
 - LP Tanks must be constructed and marked in accordance with specifications for LP Tanks of the U.S. Department of Transportation (DOT) or for Canada,

CAN/CSA-B339, tanks, spheres and tubes for transportation of dangerous goods. Transport Canada (TC). See LP Tank collar for marking.

- LP Tank valve must have:
 - Type 1 outlet compatible with regulator or grill.
 - Safety relief valve.
 - UL listed Overfill Protection Device (OPD). This OPD safety feature is identified by a unique triangular hand wheel. Use only LP Tanks equipped with this type of valve.



OPD Hand Wheel

- LP Tank must be arranged for vapor withdrawal and include collar to protect LP Tank valve. Always keep LP Tanks in upright position during use, transit



or storage.

LP Tank in upright position for vapor withdrawal

LP (Liquefied Petroleum Gas)

- LP gas is nontoxic, odorless and colorless when produced.
- For Your Safety, LP gas has been given an odor (similar to rotten cabbage) so that it can be smelled.
- LP gas is highly flammable and may ignite unexpectedly when mixed with air.

LP Tank Filling

- Use only licensed and experienced dealers.
- LP dealer must purge new tank before filling.
- Dealer should NEVER fill LP Tank more than 80% of LP Tank volume. Volume of propane in tank will vary by temperature.
- A frosty regulator indicates gas overfill. Immediately close LP Tank valve and call local LP gas dealer for assistance.
- Do not release liquid propane (LP) gas into the atmosphere. This is a hazardous practice.
- To remove gas from LP Tank, contact an LP dealer or call a local fire department for assistance. Check the telephone directory under "Gas Companies" for nearest certified LP dealers.



LP Tank Exchange

- Many retailers that sell grills offer you the option of replacing your empty LP tank through an exchange service. Use only those reputable exchange companies that inspect, precision fill, test and certify their tanks. Exchange your tank only for an OPD safety feature-equipped tank as described in the “LP Tank” section of this manual.
- Always keep new and exchanged LP tanks in upright position during use, transit or storage.
- Leak test new and exchanged LP tanks BEFORE connecting to grill.
- Place dust cap on cylinder valve outlet whenever the cylinder is not in use. Only install the type of dust cap on the cylinder valve outlet that is provided with the cylinder valve. Other types of caps or plugs may result in leakage of propane.


LP Tank Leak Test

For your safety

- Leak test must be repeated each time LP tank is exchanged or refilled.
- Do not smoke during leak test.
- Do not use an open flame to check for gas leaks.
- Oven must be leak tested outdoors in a well-ventilated area, away from ignition sources such as gas fired or electrical appliances. During leak test, keep oven away from open flames or sparks.
- Use a clean paintbrush and a 50/50 mild soap and water solution. Brush soapy solution onto areas indicated by arrows in figure below. Leaks are indicated by growing bubbles.



	WARNING	
<p>If “growing” bubbles appear do not use or move the LP tank. Contact an LP gas supplier or your fire department!</p>		

Do not use household cleaning agents. Damage to gas valve/hose/regulator components can result.

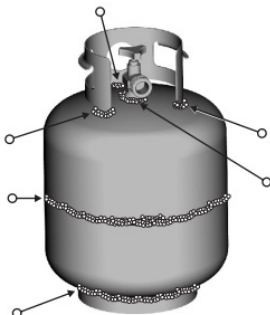

Connecting Regulator To The LP Tank


1. LP tank must be properly secured onto oven. (Refer to assembly section.)
2. Turn all control knobs to the OFF position.
3. Turn LP tank OFF by turning OPD hand wheel clockwise to a full stop.
4. Remove the protective cap from LP tank valve. Always use cap and strap supplied with valve.

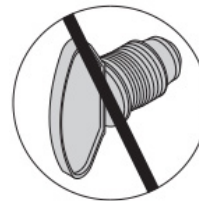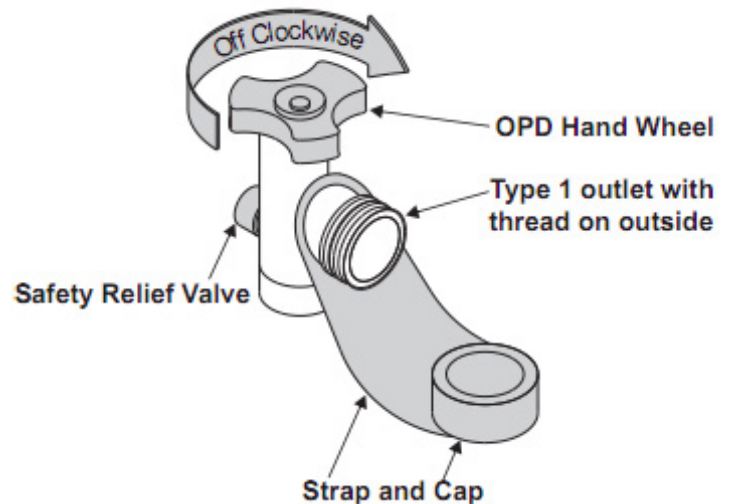


Do not insert a POL transport plug (plastic part with external threads) into the Type 1 tank valve outlet. It will defeat the Safety Relief Valve feature.

5. Hold regulator and insert nipple into LP tank valve. Hand-tighten the coupling nut, holding regulator in a straight line with LP tank valve so as not to cross thread the connection.

Nipple has to be centered into the LP tank valve.

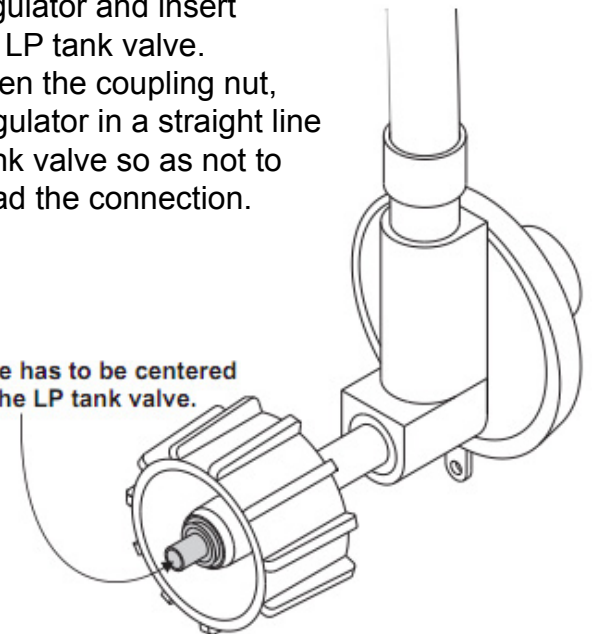

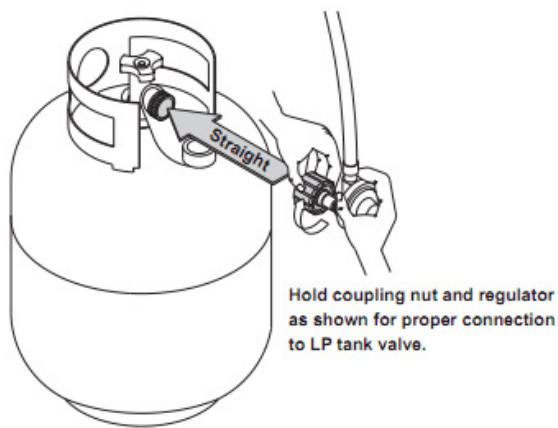

6. Turn the coupling nut clockwise and tighten to a full stop. The regulator will seal on the back-check feature in the LP tank valve, resulting in some resistance. **An additional one-half to three-quarters turn is required to complete the connection. Tighten by hand only – do not use tools.**

NOTE:

If you cannot complete the connection, disconnect regulator and repeat steps 5 and 6. If you are still unable to complete the connection, do not use this regulator!


Call (435) 252-3030 for identical replacement parts.

!	DANGER	!
<ul style="list-style-type: none"> Do not insert any tool or foreign objects into the valve outlet or safety relief valve. You may damage the valve and cause a leak. Leaking propane may result in explosion, fire, severe personal injury, or death. If a leak is detected at any time, STOP and call the fire department. If you cannot stop a gas leak, immediately close LP tank valve and call LP gas supplier or your fire department! 		

!	WARNING	!
<ul style="list-style-type: none"> Never attempt to attach this grill to the self-contained LP gas system of a camper trailer or motor home. Do not use grill until leak-tested. 		

Leak Testing Valves, Hose and Regulator

1. Turn all oven control knobs to OFF.
2. Be sure regulator is tightly connected to LP tank.
3. Completely open LP tank valve by turning OPD hand wheel counterclockwise. If you hear a rushing sound, turn gas off immediately. There is a major leak at the connection. Correct before proceeding by calling for replacement parts at (435) 252-3030.
4. Brush soapy solution onto areas where bub-

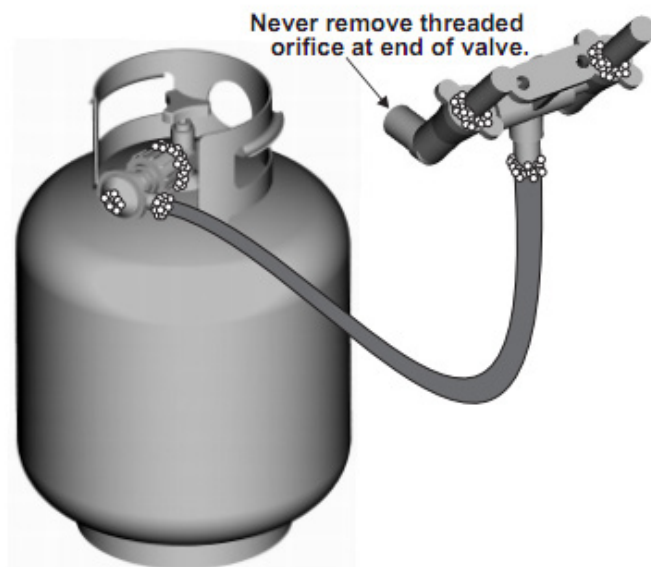





bles are shown in picture below:

5. If **“growing”** bubbles appear, there is a leak. Close LP tank valve immediately and retighten connections. **If leaks cannot be stopped do not try to repair. Call** for replacement parts at (435) 252-3030.
6. Always close LP tank valve after performing leak test by turning hand wheel clockwise.

Safety Tips

1. Before opening LP cylinder valve, check the coupling nut for tightness.
2. When Pizza Oven is not in use, turn off control knob and LP cylinder valve.
3. Never move Pizza Oven while in operation or still hot.
4. Use long-handled barbecue utensils and oven mitts to avoid burns and splatters.
5. Maximum on side shelf is 10 lbs.
6. Clean Pizza Oven often, preferably after each cookout. If a bristle brush is used to clean the cooking surface, ensure no loose bristles remain on cooking surfaces prior to cooking.
7. If you notice grease or other hot material dripping from Pizza Oven onto valve, hose or regulator, turn off gas supply at once. Determine the cause, correct it, then clean and inspect valve, hose and regulator before continuing. Perform a leak test.
8. Keep ventilation openings in cylinder enclosure free and clear of debris.
9. The regulator may make a humming or whistling noise during operation. This will not affect safety or use of Pizza Oven.
10. If you have a Pizza Oven problem see the “Troubleshooting Section”.
11. If the regulator frosts, turn off Pizza Oven and LP cylinder valve immediately. This indicates a problem with the cylinder and it should not be used on any product. Return to supplier!

	WARNING	
Turn controls and gas source or tank OFF when not in use.		
	CAUTION	
If ignition does NOT occur in 5 seconds, turn the burner controls OFF, wait 5 minutes and repeat the lighting procedure. If the burner does not ignite with the valve open, gas will continue to flow out of the burner and could accidentally ignite with risk of injury.		

Match-Lighting

Do not lean over Pizza Oven while lighting.

1. Place match into match holder (hanging from side panel of griddle). Light match; then light burner by placing match on right or left side of griddle.
2. Push in and turn burner knob to the HI position, depending on match light hole selected. Be sure burner lights and stays lit.

Burner Flame Check

- Light burner, rotate knob from HI to low. You should see a smaller flame in low position than seen on HI. Perform burner flame check on side burner, also. Always check flame prior to each use. If only low flame is seen refer to “Sudden drop or low flame” in the Troubleshooting.

Turning Grill Off

- Turn knob to the OFF position. Turn LP cylinder OFF by turning hand-wheel clockwise to a full stop.

Ignitor Check

- Turn gas off at LP cylinder. Press and hold electronic ignitor button. “Click” should be heard and spark seen each time between each collector box or burner and electrode. See “Troubleshooting” if no click or spark.

Valve Check

- Important: Make sure gas is off at LP cylinder before checking valves. Knobs lock in OFF

position. To check valve, first push in knob and release, knob should spring back. If knob does not spring back, replace valve assembly before using oven. Turn knob to low position then turn back to OFF position. Valve should turn smoothly.

Hose Check

- Before each use, check to see if hoses are cut or worn. Replace damaged hoses before using oven. Use only identical replacement part valve/hose/regulator as specified in the Parts List of this Use and Care Guide.

General Oven Cleaning

- Do not mistake brown or black accumulation of grease and smoke for paint. Interiors of gas ovens are not painted at the factory (and should never be painted). Apply a strong solution of detergent and water or use an oven cleaner with scrub brush on insides of oven lid and bottom. Rinse and allow to completely air dry. Do not apply a caustic griddle/oven cleaner to painted surfaces.
- Plastic parts: Wash with warm soapy water and wipe dry. Do not use Citrisol, abrasive cleaners, degreasers or a concentrated oven cleaner on plastic parts. Damage to and failure of parts can result.
- Painted surfaces: Wash with mild detergent or nonabrasive cleaner and warm soapy water. Wipe dry with a soft nonabrasive cloth.
- Stainless steel surfaces: To maintain your oven’s high quality appearance, wash with mild detergent and warm soapy water and wipe dry with a soft cloth after each use.
- Baked-on grease deposits may require the use of an abrasive plastic cleaning pad. Use only in direction of brushed finish to avoid damage. Do not use abrasive pad on areas with graphics.
- Stone just needs to be brushed off. If desired, wash Pizza Stone with warm water. NEVER use soap as it may penetrate the stone cooking area and leave a soap taste in food.
- If a bristle brush is used to clean any of the oven cooking surfaces, ensure no loose bristles remain on cooking surfaces prior to cooking.

Storing Your Pizza Oven

- Clean pizza stone.
- Store in dry location.
- When an LP cylinder is connected to Pizza Oven, store outdoors in a well-ventilated space and out of reach of children.
- Cover Pizza Oven if stored outdoors. Choose from a variety of Pizza Oven covers offered by Blackstone.
- Store Pizza Oven indoors ONLY if LP cylinder is turned off and disconnected, removed from Pizza Oven and stored outdoors.
- When removing Pizza Oven from storage, follow “Cleaning the Burner Assembly” instructions before starting griddle.

Cleaning the Burner Assembly

Follow these instructions to clean and/or replace parts of burner assembly or if you have trouble igniting Pizza Oven.

1. Turn gas OFF at control knob and LP cylinder.
2. Remove upper cover (Part 10 on parts list).
3. Remove heat shield and aluminum cover, stone, and rotating panel.
4. Detach electrode from burner.
NOTE: Removal/Detachment method will depend on the burner configuration.
5. Carefully lift burner up and away from valve openings. We suggest three ways to clean the burner tubes. Use the one easiest for you. (A) Bend a stiff wire (a light weight coat hanger works well) into a small hook. Run the hook through burner tube several times. (B) Use a narrow bottle brush with a flexible handle (do not use a brass wire brush), run the brush through burner tube several times. (C) Wear eye protection: Use an air hose to force air into the burner tube and out the burner ports. Check each port to make sure air comes out each hole.
6. Wire brush entire outer surface of burner to remove food residue and dirt.
7. Clean any blocked ports with a stiff wire such as an open paper clip.
8. Check burner for damage, due to normal wear and corrosion some holes may become enlarged. If any large cracks or holes are found replace burner.

VERY IMPORTANT: Burner tubes must reengage valve openings.

9. Attach electrode to burner.
10. Carefully replace burners.

11. Attach burners to brackets on firebox.
12. Reposition carryover tubes and attach to burner.

Food Safety

Food safety is a very important part of enjoying the outdoor cooking experience. To keep food safe from harmful bacteria, follow these four basic steps:

Clean: Wash hands, utensils, and surfaces with hot soapy water before and after handling raw meat and poultry.

Separate: Separate raw meats and poultry from ready-to eat foods to avoid cross contamination. Use a clean platter and utensils when removing cooked foods.









Cook: Cook meat and poultry thoroughly to kill bacteria. Use a thermometer to ensure proper internal food temperatures.

Chill: Refrigerate prepared foods and leftovers promptly. For more information Visit the Canadian partnership for Consumer Food Safety Education-www.befood safe.ca.









How To Tell If Meat Is Grilled Thoroughly

- Meat and poultry cooked on a griddle or oven often browns very fast on the outside. Use a meat thermometer to be sure food has reached a safe internal temperature, and cut into food to check for visual signs of being done.
- Whole poultry should reach 165° F/74°C. Juices should run clear and flesh should not be pink.
- Hamburgers made of any ground meat or poultry should reach 160° F/71°C , and be brown in the middle with no pink juices. Beef, veal and lamb steaks, roasts and chops can be cooked to 145° F/63°C . All cuts of pork should reach 160° F/71°C.
- NEVER partially grill meat or poultry and finish cooking later. Cook food completely to destroy harmful bacteria.
- When reheating takeout foods or fully cooked meats like hot dogs, grill to 165° F/64°C , or until steaming hot dogs, grill to 165°F/74°C, or until steaming hot.
- Follow these guidelines when cooking these types of foods on your pizza.

ILLUSTRATED PARTS LIST 1-8

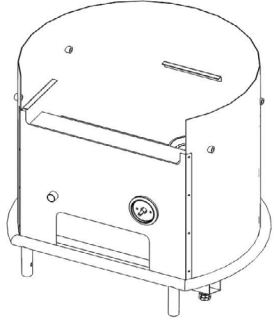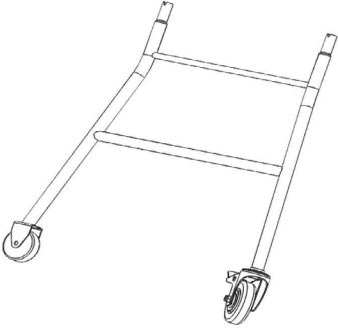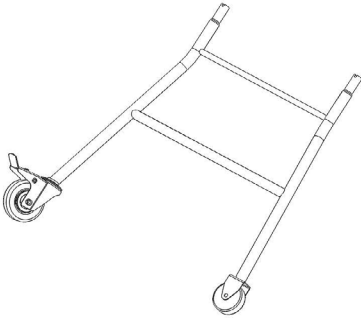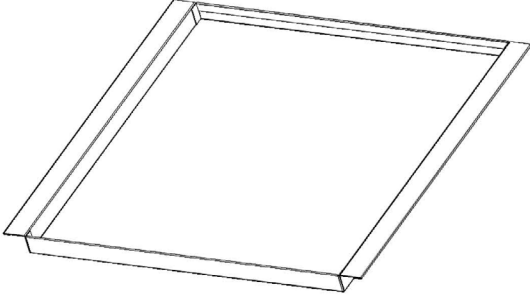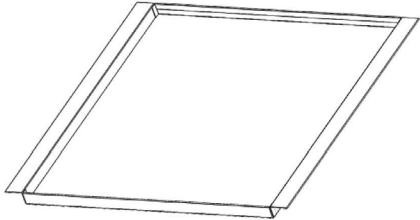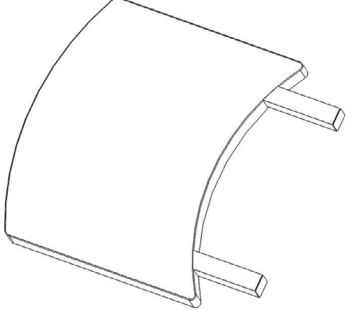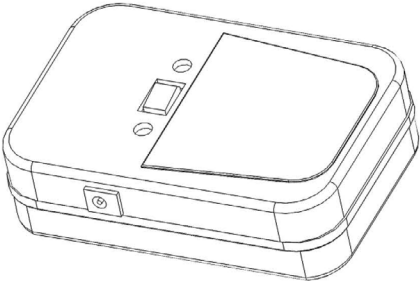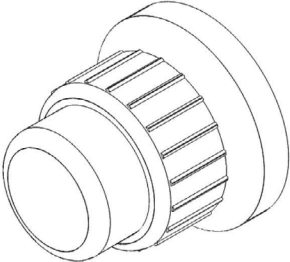
<p>1.Main body.....1pcs</p> 	<p>2.Left feet assembly.....1pcs</p> 
<p>3.Right feet assembly.....1pcs</p> 	<p>4.The second lower board..... 1pc</p> 
<p>5.The first lower board.....1pcs</p> 	<p>6.Side board.....2pcs</p> 
<p>7.Rotating motor.....1pcs</p> 	<p>8. igniter cover.....1pcs</p> 

ILLUSTRATED PARTS LIST 9-16

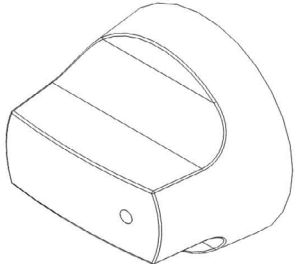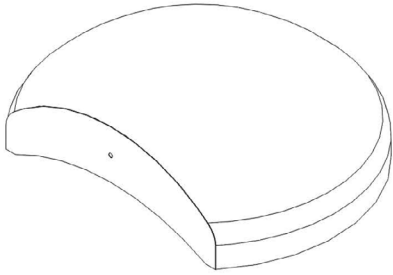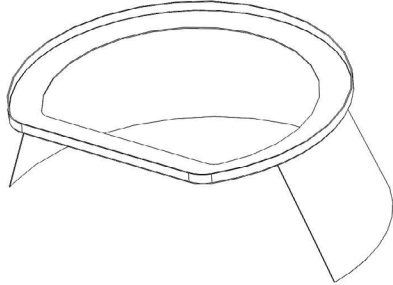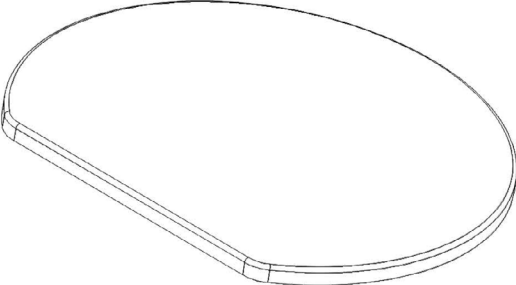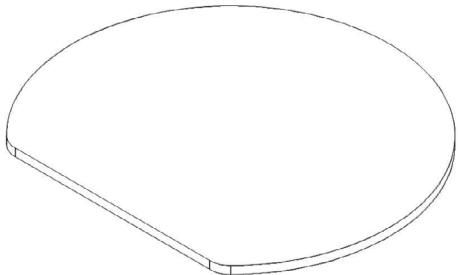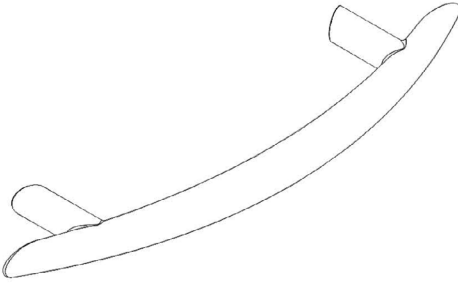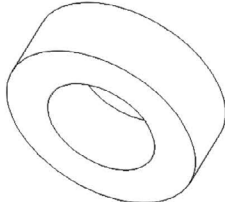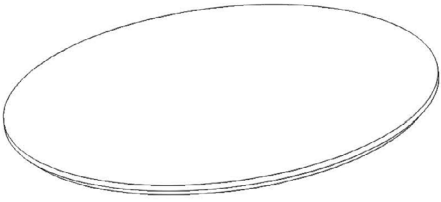
<p>9.Knob.....1pcs</p> 	<p>10.Upper cover.....1pcs</p> 
<p>11.Heat shield.....1pcs</p> 	<p>12.Aluminum cover.....1pcs</p> 
<p>13.Ceramic tile.....1pcs</p> 	<p>14.Handle.....2pcs</p> 
<p>15.PF ring.....4pcs</p> 	<p>16.Pizza stone.....1pcs</p> 

ILLUSTRATED PARTS LIST 17-20


17. Bolt.....4pcs

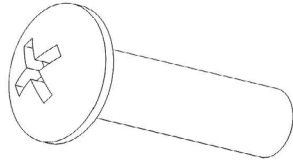


18. Fasten knob.....4pcs

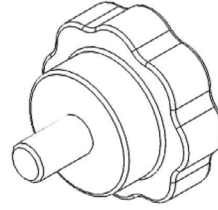

19. Rotating panel.....1pcs

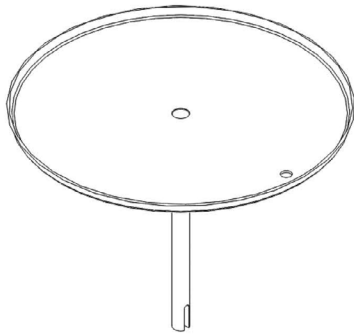

20. Thermometer.....1pcs

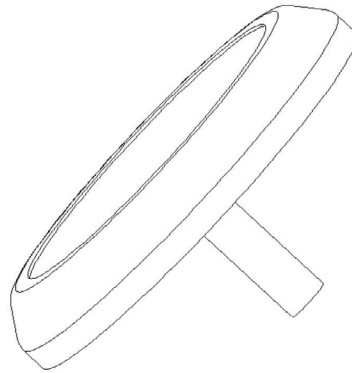

WARNING: The manufacturer has made every effort to eliminate any sharp edges. However, you should handle all components with care to avoid accidental injury. Tools required: The only tool needed is a Phillips Screwdriver needed for minimal assembly on the cover and main body handles.


ASSEMBLY:

Please read all instructions thoroughly before proceeding. Find a large, clean area in which to assemble your Pizza Oven. Please refer to the parts list and assembly diagram as necessary. Pizza Oven assembly involves large components; therefore, it is advised to have two people set up the unit.

NOTICE: *Make sure all the plastic protection is removed before assembling*


Step 1

Take out the main body, rotating panel and right/left feet assembly from the box. Install the feet assembly on the body and insert the rotating panel into the body as pictured below.

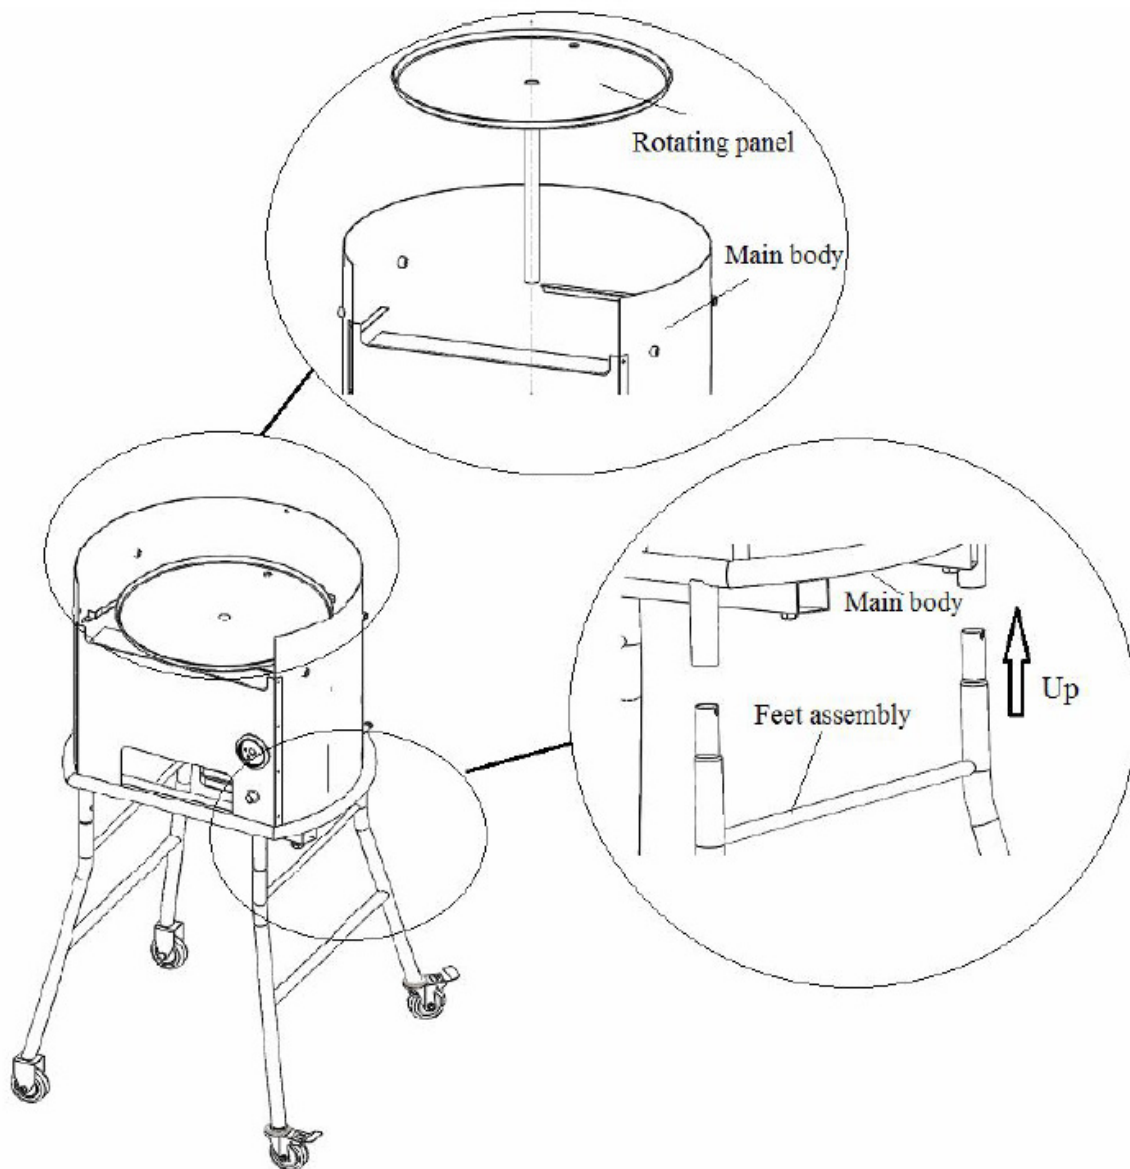


Step 2 :


Take out the handle, PF ring and bolt and assemble them as pictured below

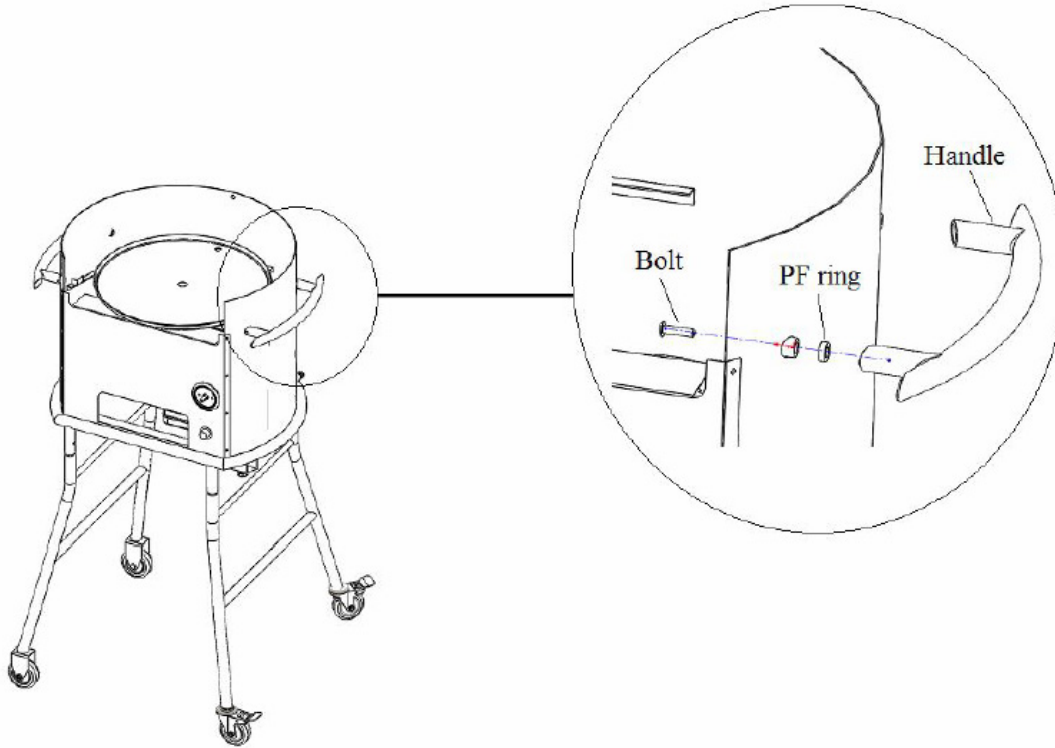


Step 3 : (Refer steps a,b, & c on pages 16 & 17)

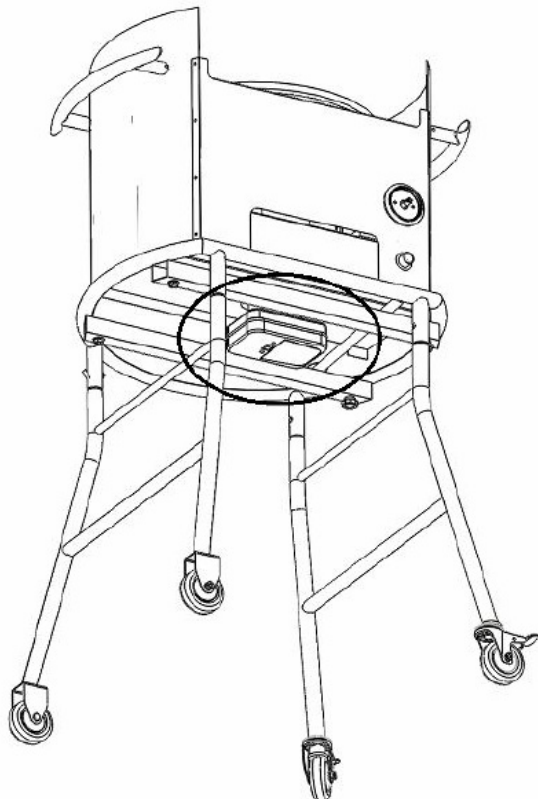


a) Adjust the slot on the rotating axis of pizza oven as pictured below

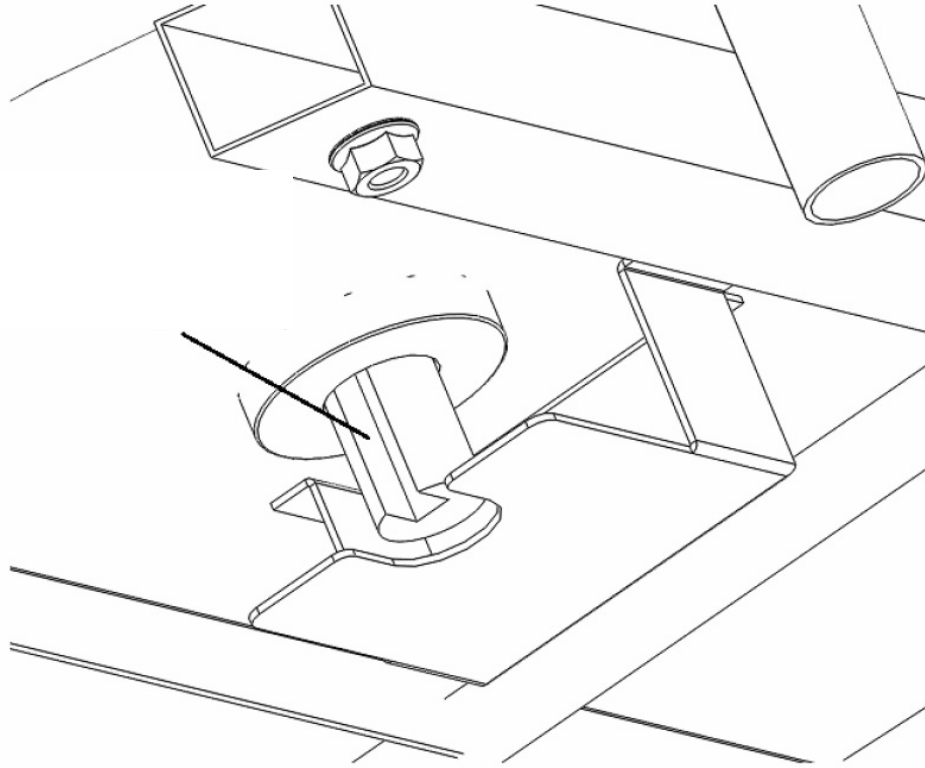

b) Take out the rotating motor and assemble it as shown below

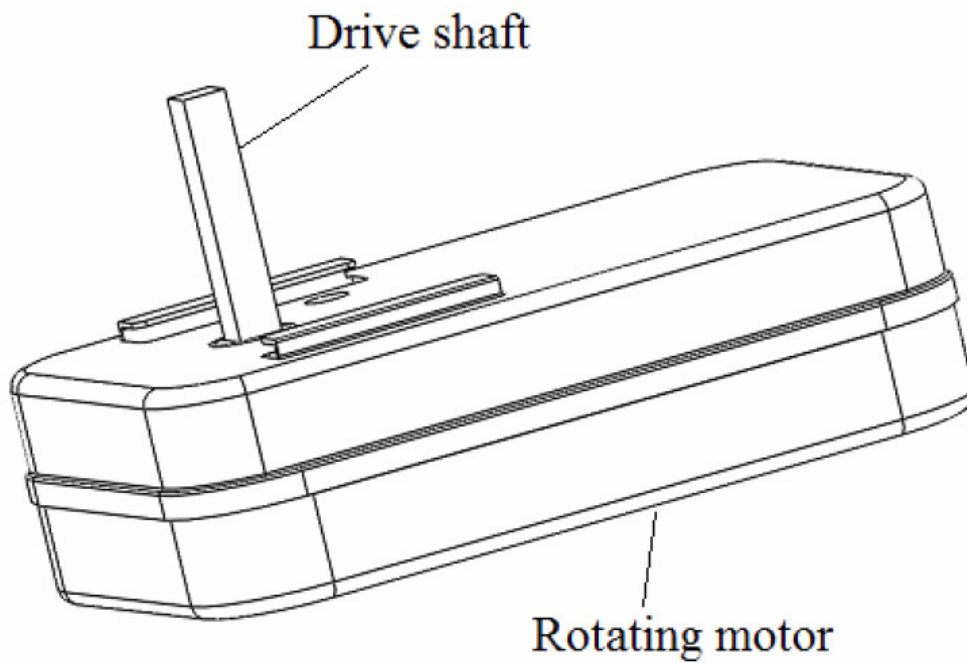


c) Move the rotating motor until the drive shaft matches the rotating axis completely

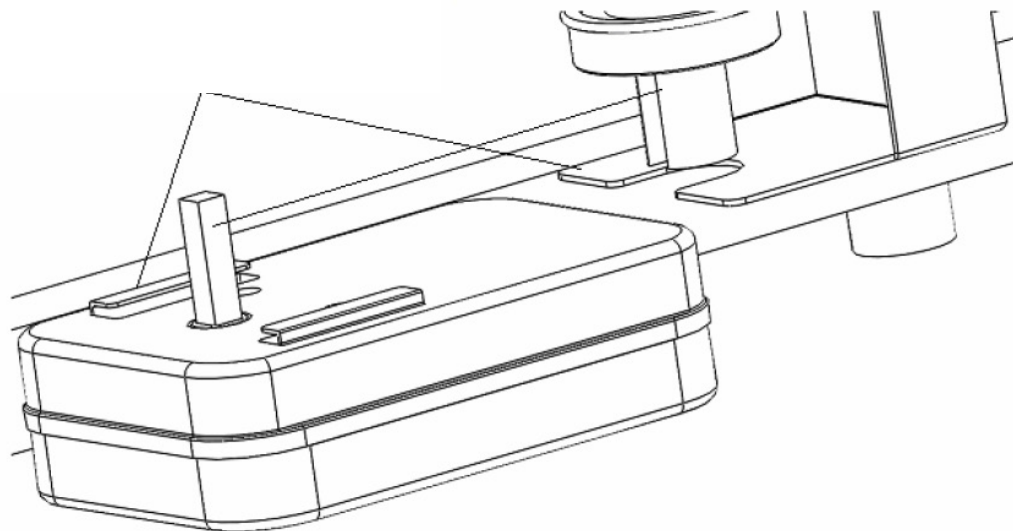

Step 4


Take out the pizza stone and put it on the rotating panel

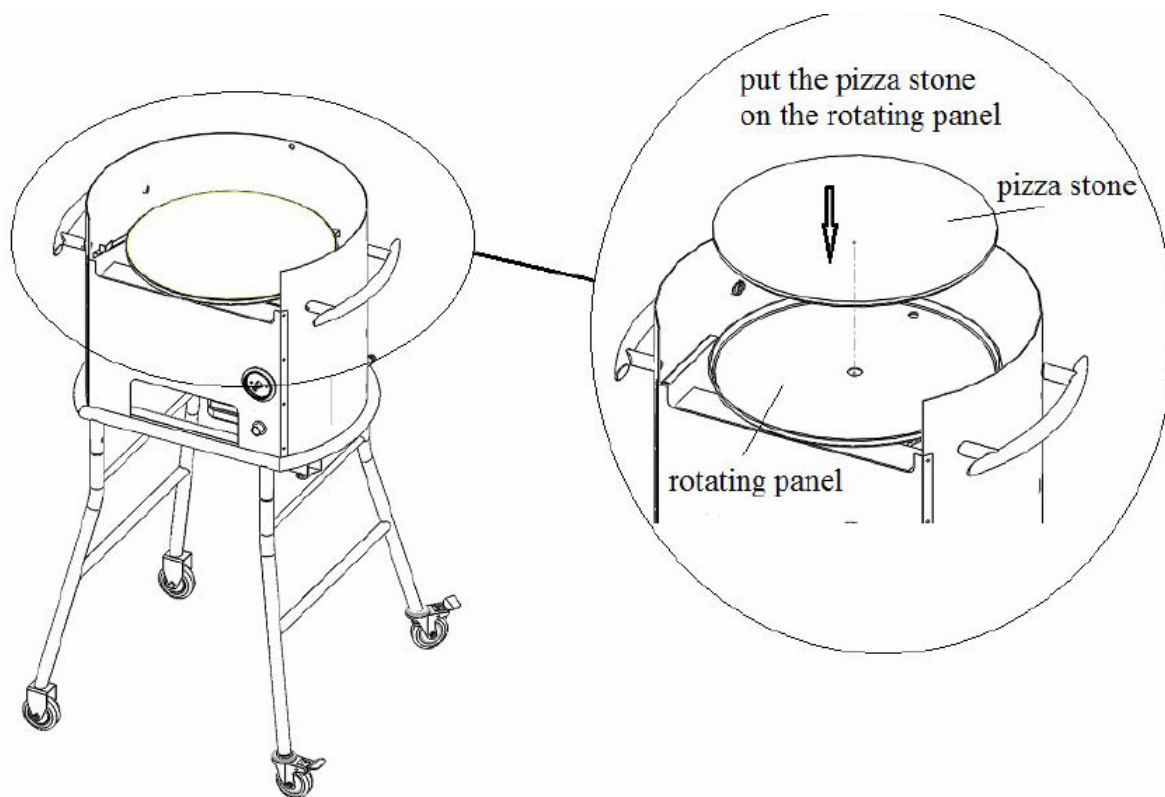

Step 5


Insert the heat shield into the main body as shown below

NOTE: It is important that the heat shield lines up correctly

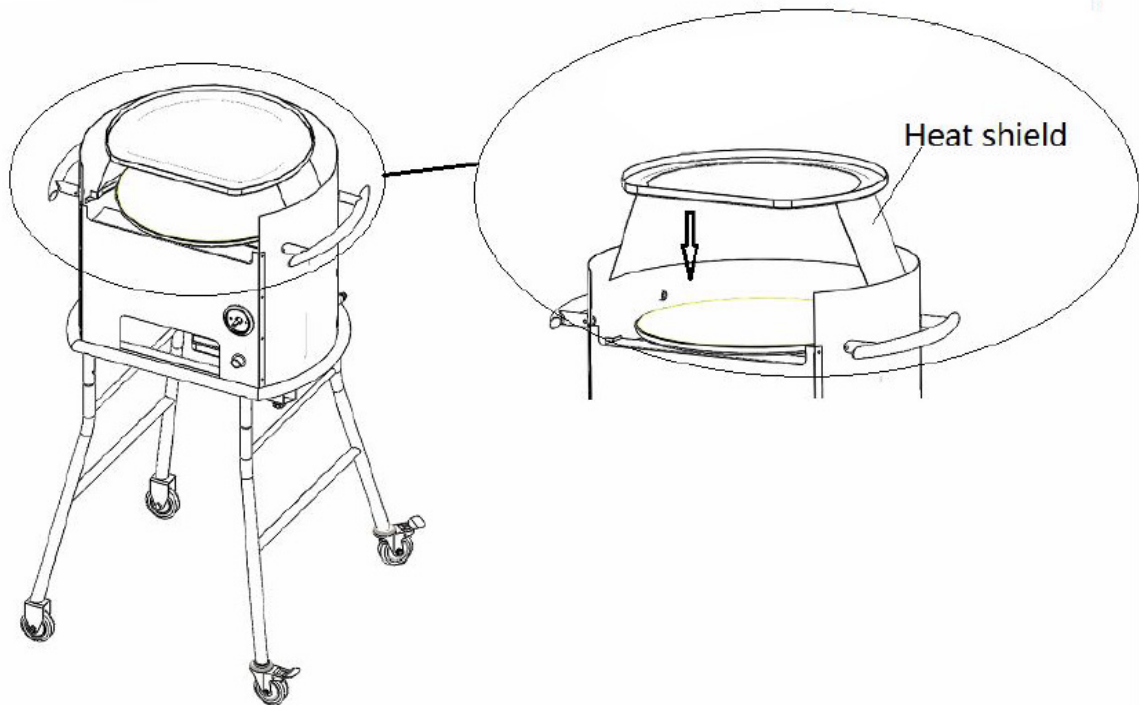


Step 6

Take out the upper pizza stone and put on the heat shield

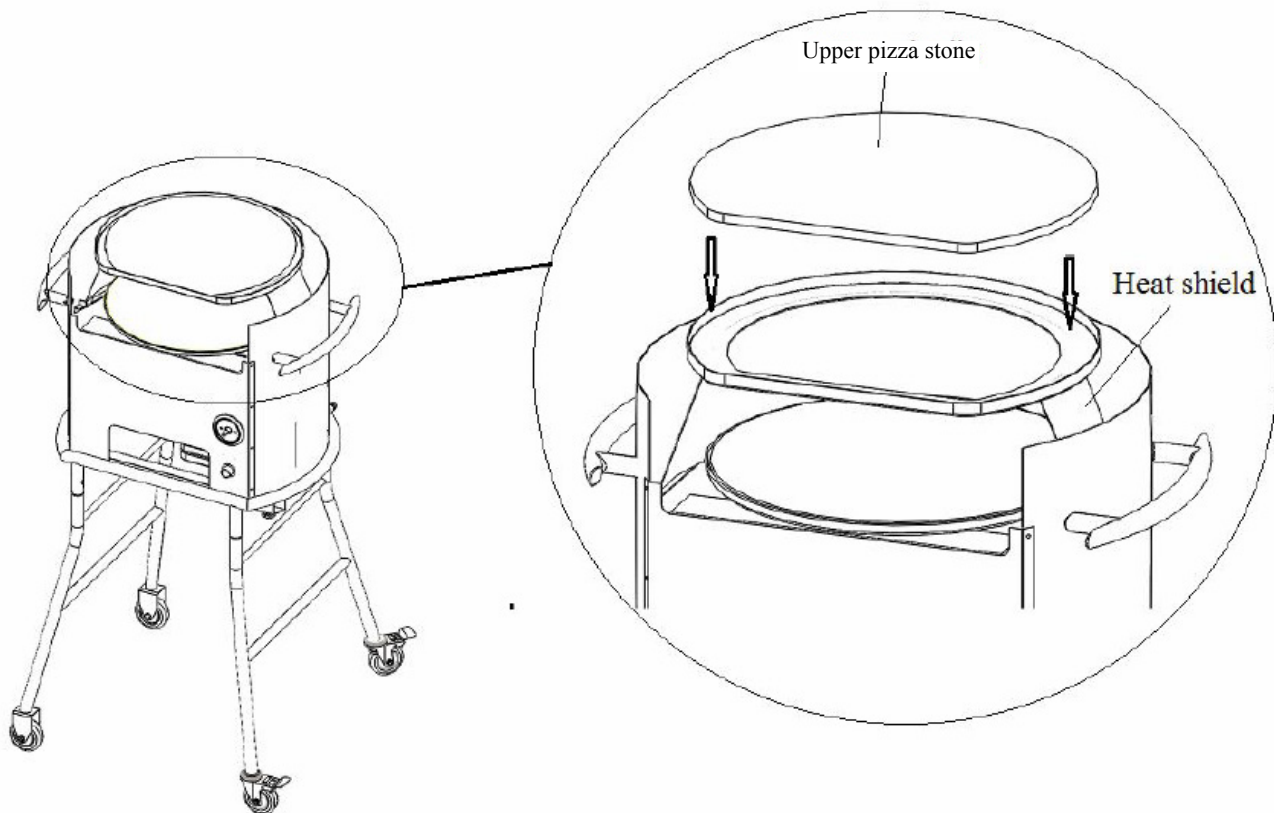


Step 7

Take out the aluminum cover and put it on top of the heat shield (upper pizza):

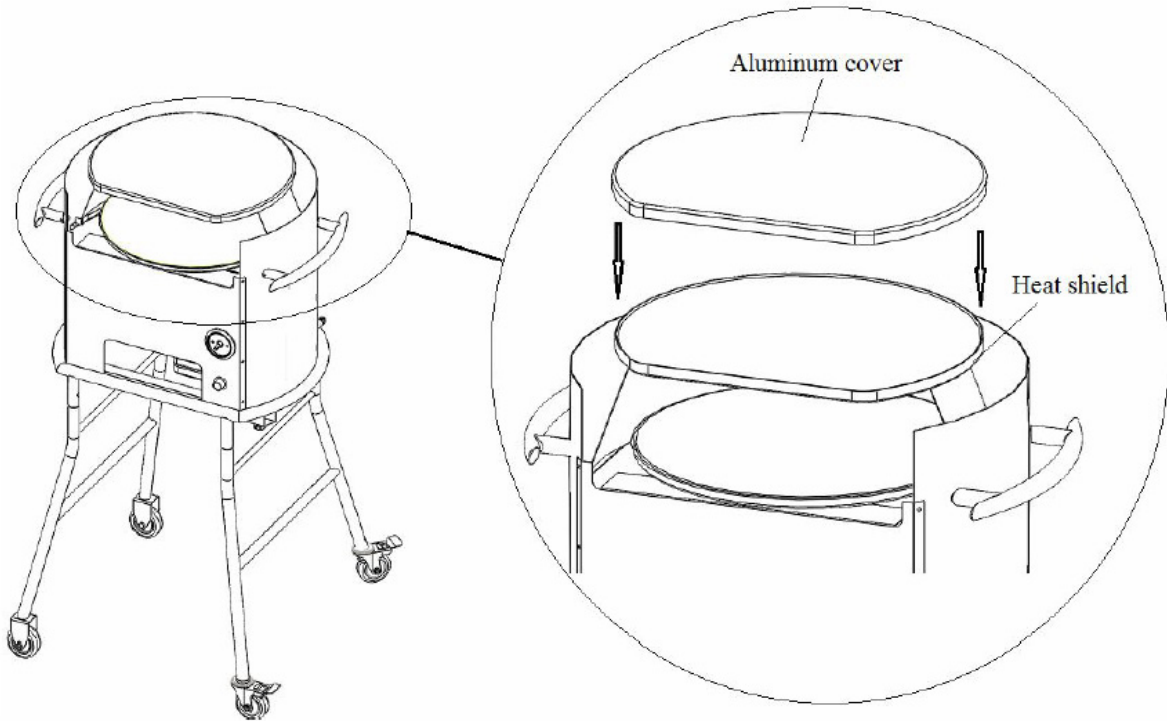


Step 8

Take out the two side boards. Assemble them on the main body and fix them with the fasten knob

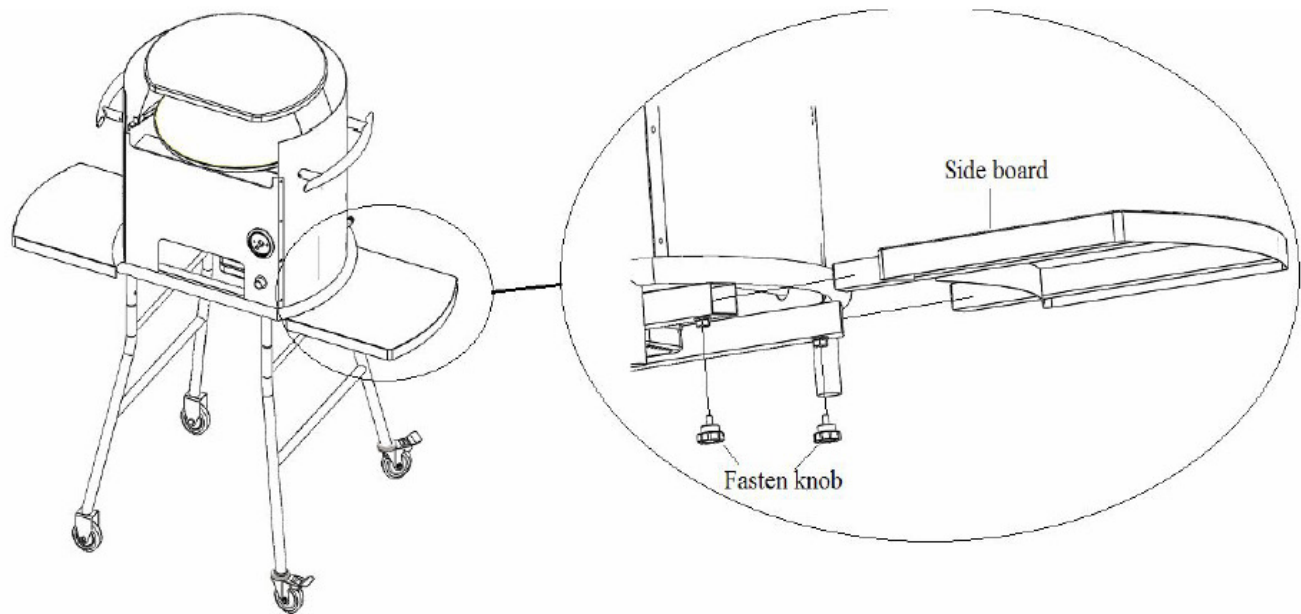

Step 9


Take out the upper cover and put it on the main body as show below

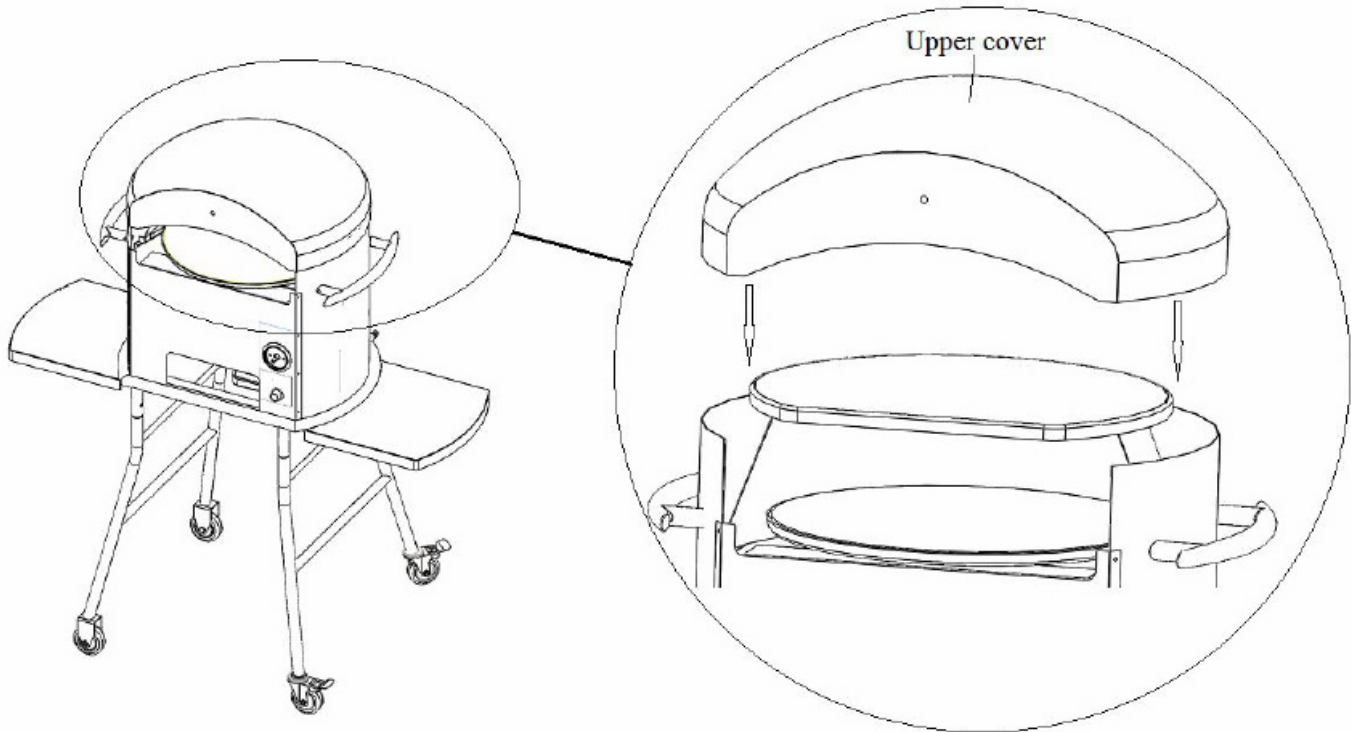

Step 10


Take out the first and second lower shelves and put them on the legs

NOTE: The top tray can be removed easily for cleaning crumbs from the oven

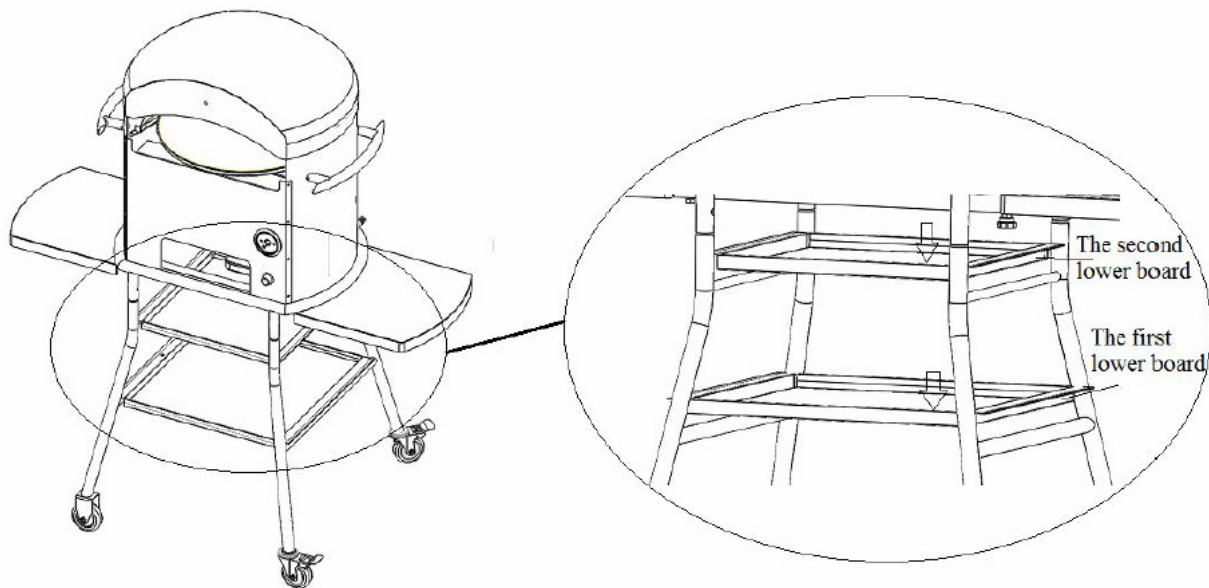


Step 11

Insert the battery and assemble the igniter cover and the knob as shown below (battery not included)

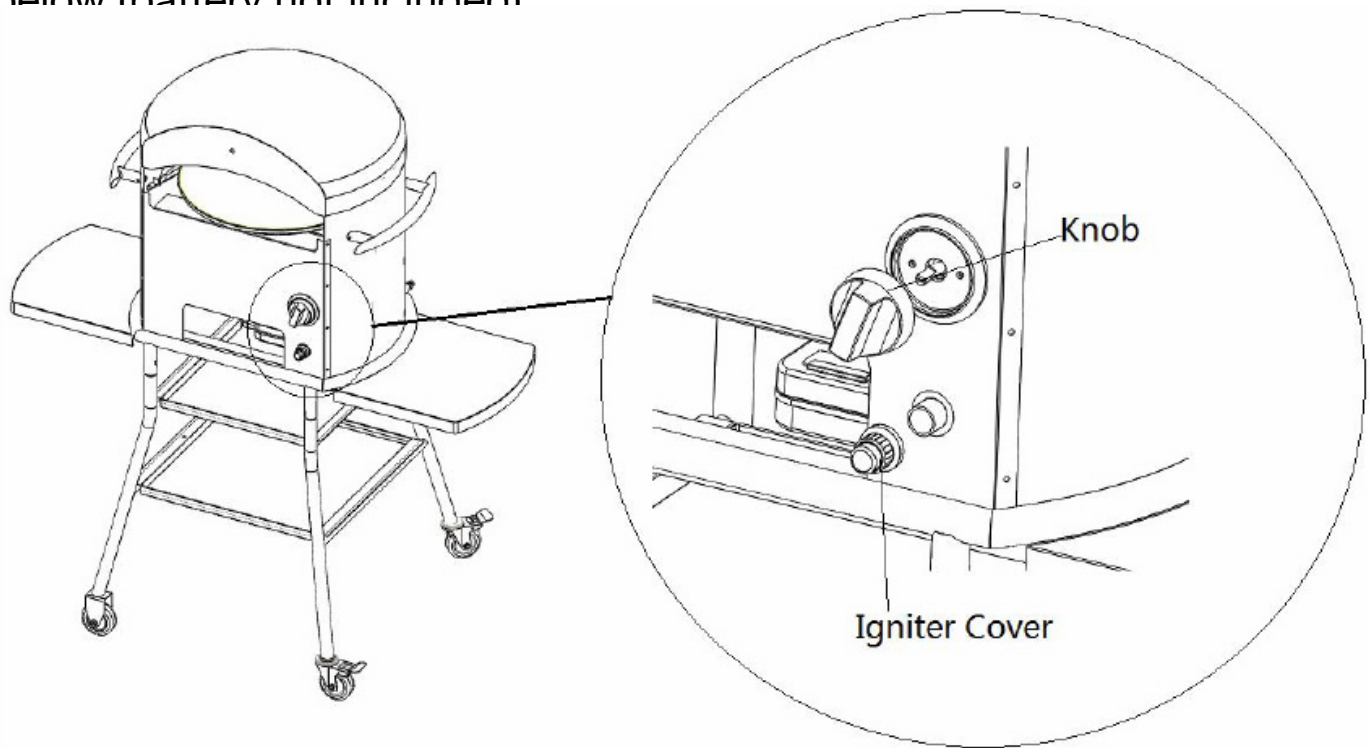

Step 12

Assemble the thermometer on the upper cover

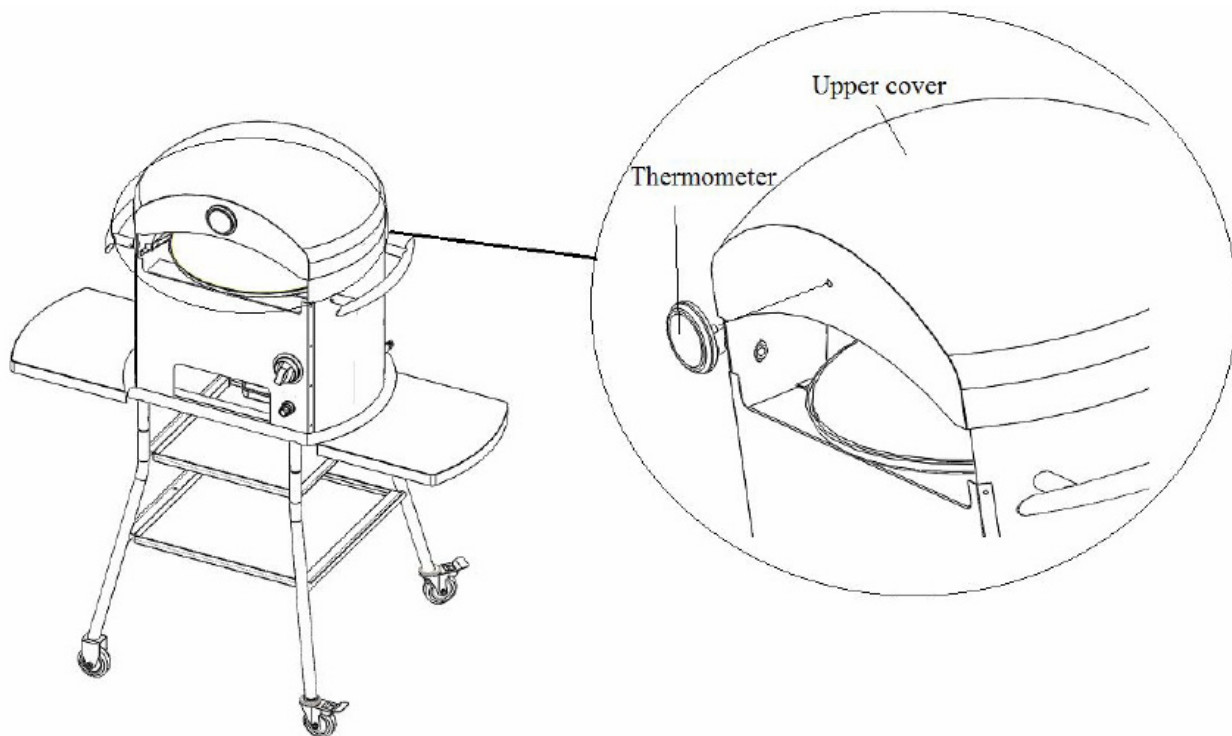

HOW TO USE YOUR PIZZA OVEN

1. Turn the Pizza Oven on high and let it warm up. It's fully warmed up when the thermometer hits 300° (approx. 10 minutes).
2. Turn temperature knob down to medium heat and let the temperature settle between 350° - 400° (approx. 5 minutes).
3. Depending on the pizza, optimal cooking temperature is about 375°. NOTE: the pizza stone surface is hotter than the air.
4. The cooking time is about 2-4 minutes depending on the size and thickness of the dough of the pizza.
5. Pull out the pizza when the crust is to a desired perfection (or when the edges of the pizza crust are brown/golden).

FINE TUNING YOUR PIZZA OVEN

NOTE: The time and temperature of your oven will depend largely on your outside temperature and elevation.

1. Between the control knob, on the front of the unit ,and the adjustable knob, on the regulator, you can adjust the flow (trial and error is recommended depending on the type and size of the pizza you are cooking).
2. Visit our website www.blackstoneproducts.com to find some great tips on how to become a Blackstone Pizza Pro. You can watch video tutorials, get dough recipes, and read success stories, tips, and find favorite recipes from other customers as well as leave some of your own feedback as well.

Practice makes perfect so experiment and overall have fun with your Blackstone Pizza Oven!

CARE AND MAINTENANCE

Regularly clean your Pizza Oven between uses and especially after extended periods of storage. Ensure that the Pizza Oven and its components are sufficiently cool before cleaning.

- Never handle hot parts with unprotected hands.
- In order to extend and maintain the life and condition of your Pizza Oven, we strongly recommend that the unit be covered when left outside for any length of time, especially during the winter months.

Burner maintenance:

In most circumstances, burning off the residue after cooking will keep the burner clean. The burner should be removed and cleaned annually or whenever heavy build-up is found in order to ensure that there is no blockage (debris, insects) in either the burner portholes or venture tubes. Use pipe cleaner to clear obstructions. A wire brush can be used to remove corrosion from the burner surfaces. When refitting the burner, be careful to check that the venture tubes of the burner fit over the valve outlets.

Fittings and Storage:

Annual checking and tightening of metal fittings is recommended. Store the Pizza Oven in a cool dry place. Cover the burners with aluminum foil in order to prevent insects or other debris from collecting in the burner holes. If the Pizza Oven is to be stored indoors, the gas bottle must be disconnected and left outside. The gas bottle should always be stored outside, out of reach of children, and in a dry, well-ventilated area away from any sources of heat or ignition.

TROUBLE SHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Burner will not light using the ignition system.	<ol style="list-style-type: none"> 1. Check battery. 2. LP gas cylinder is empty. 3. Faulty regulator. 4. Obstructions in the burner. 5. Obstructions in gas jets or gas hose. 6. Electrode wire is loose or disconnected on electrode or ignition unit. 7. Electrode or wire is damaged/faulty pushbutton igniter. 	<ol style="list-style-type: none"> 1. Replace with a good battery. 2. Replace with full cylinder. 3. Have the regulator checked or replaced. 4. Clean burner. 5. Clean jets and gas hose. 6. Reconnect wire. 7. Change electrode and wire change igniter.
Burner will not light with a match.	<ol style="list-style-type: none"> 1. LG gas cylinder is empty. 2. Faulty Regulator. 3. Obstructions in burner. 4. Obstructions in gas jets or gas hose. 	<ol style="list-style-type: none"> 1. Replace with full cylinder. 2. Have the regulator checked or replaced. 3. Clean Burner. 4. Clean jets and gas hose.
Fire in burner tube has a low flame or flashback (a hissing or roaring noise may be heard)	<ol style="list-style-type: none"> 1. LP gas cylinder is empty. 2. Obstructions in burner. 3. Obstructions in gas jets or gas hose. 4. Windy conditions. 	<ol style="list-style-type: none"> 1. Use larger cylinder. 2. Clean burner. 3. Clean jets and gas hose. 4. Use grill in a more sheltered position.

North Atlantic 90-Day Warranty

North Atlantic the manufacturer, will warranty for 90 days from purchase all parts, workmanship, and finishes (against rust).

It will be the manufacturer's option as to whether to repair or replace any of the above items.

All warranties are limited to the original purchaser only. This warranty does not cover any liability on the part of North Atlantic., its agents or employees, for any indirect or consequential damages for breach of warranty.

The purchaser must follow the manufacturer's usage instructions.

Under no circumstances is the manufacturer responsible for damages from the failure to operate the Pizza Oven properly.

It is the responsibility of the purchaser to establish the warranty period by verifying the original purchase date with original sales receipt.

For more detailed explanation of the warranty, read below:

North Atlantic warrants to the owner that the product covered by this agreement is free from defects in material and workmanship under normal use and service for which it was intended if, but only if, it has been operated in accordance with North Atlantic instructions exclusively for domestic use, and not for private or public club, institutional, or commercial purposes. North Atlantic obligation under this warranty is limited to replacing or repairing, free of charge, any part or parts that may prove, to the satisfaction in North Atlantic, to be defective under normal home use and service within the following stated periods of time from the date of purchase; a) for ninety (90) days from purchase, all parts, finish, and workmanship. Should any failure to conform to this warranty become apparent during applicable warranty periods stated above, the original purchaser must notify North Atlantic of breach or warranty within the applicable warranty period. North Atlantic shall upon notice and compliance by the original purchaser with such instructions, correct such nonconformity by repair or replacement of the defective part or parts. Correction in the manner provided above shall constitute a fulfillment of all obligations of North Atlantic with respect to the quality of the product.

North Atlantic does not warrant this equipment to meet the requirement of any safety code of any state, municipality or other jurisdiction, and the original purchaser assumes all risk and liability whatsoever resulting from the use thereof, whether used in accordance with North Atlantic instructions or otherwise. This warranty does not cover and is intended to exclude any liability on the part of North Atlantic its agents, servants or employees whether under this warranty or implied by law for any indirect or consequential damages for breach on any warranty. The purchaser must establish all applicable warranty periods pursuant to this warranty by verifying the original purchase date by producing the dated sales receipt. This warranty shall not apply to this product or any other part thereof which has been subject to accident, negligence, alteration, abuse, or misuse or which as been repaired or altered without North Atlantic written consent, outside of North Atlantic factory. North Atlantic makes no warranty whatsoever in respect to accessories or parts not supplied with it. This warranty shall apply only within the boundaries of the United States of America. This warranty gives the original purchaser specific rights, and the original purchaser may also have other rights, which vary from state to state.

Our Customer Service staff is here to help you!

For questions regarding your Blackstone Commercial Pizza Oven, or if in need of replacement parts, you may contact us at:

(435) 252-3030

or

support@blackstoneproducts.com

We're pleased to help you with any questions concerning replacement parts or your warranty. Our customer service staff can be reached Monday through Friday from 8:00 am to 5:00 pm Mountain Standard Time. If all operators are busy or you call after hours, you may leave a message and your call will be returned.