

LITE TUNES

#V45000-71

Thank you for purchasing this new Sylvania™ **LITE TUNES**. This **LITE TUNES** assembles in minutes.

The **LITE TUNES**:

 
 
CARTON INCLUDES:

- 1 Litetunes
- 2 Remote controls
- 1 Set ground stake
- 1 Audio cable

⚠ **PRODUCT FUNCTION**

The LiteTunes enables the user to plug in lights, trees and yard decoration, connect your favorite holiday music and select from 9 functions to create your very own light & sound show.

Introduction of LiteTunes

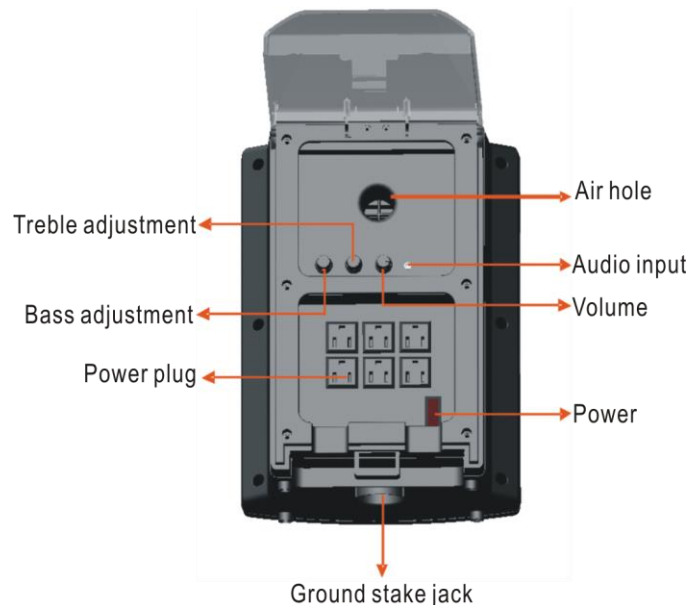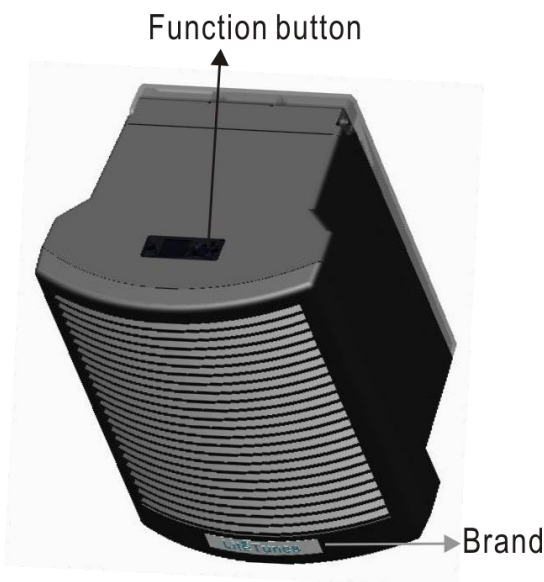

1. There are 6 outlets behind the LiteTunes box. You can insert 6 different groups of lamps or extension cord.
2. Touch button of LiteTunes panel, manual operation:
 - Choose different light show modes.
 - LED display, indicate different working mode.
3. The LiteTunes has RF receiver function, you can control the power on/off and different light show mode of host via remote control.
4. The LiteTunes has wifi function; you can control LiteTunes through the phone app.
 - Deliver the music on the phone to the LiteTunes, the music will play on the LiteTunes.
 - Control the on/off/functions of LiteTunes.

- Choose different light show mode.
- Choose different timer to turn the LiteTunes box off.
- Control the power of 6 outlets individually as power output.

⚠ OPERATION INSTRUCTIONS

 
The litetunes need to be plugged into a power source, they can be plugged into a wall socket directly or into a power cord.

Note: always use ul approved power cords with outdoor rating GFCI outlet. Plugging in your lights, trees and yard décor.

Plug 6 different groups of lamp combination into the 6 receptacles on the back of LiteTunes.

When the power supply is on, turn on the power switch on the back of LiteTunes.

The LED Display panel shows “- -”

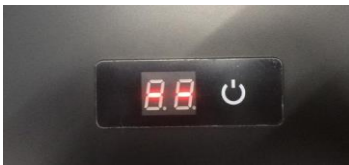

1. Press the power on/off on LiteTunes panel.

The LED Display panel shows “00”

The 6 lights light on one time sequentially, then all lights on.

2. There are 9 functions of steady ways of flashing lamp. Press the power on/off on litetunes panel to choose.

Function 1-9: LED Display panel shows “01-09”

Function 10 Lights dance along with the melody of music.

3. Press the power on/off button more than 2 seconds to make power off.
4. Line in mode: Deliver the music on the phone or MP3/ipod into the LiteTunes via audio cable. The working mode automatically changes into function 10 (LED Display panel shows “10”)
 - When in “Line in mode”, the wifi of smart phone will not be able to function remotely.

⚠ SAFETY INSTRUCTIONS

Please read and understand this entire manual before attempting to assemble, operate or install the product.

1. When in the mode of light & sound show (Light dances along with the music), the maximum output amperage of each plug is 2.5A.
2. When using remote control to control the power (using phone app), the output amperage of each output plug is 15A(maximum).

3. **CAUTION** – Risk of Fire. Not for permanent installation. Use only with a total of 12 Ampere maximum Christmas-tree or other seasonal lighting products. Do not install or use this product for more than a 90-day period.
4. If using Christmas tree or decorative -lighting products that are not marked with an ampere rating, connect no more than 140 screw-base lamps (C7 or C9) or 12 strings with midget (push-in) lamps to this cord set.
5. If using an Outdoor Seasonal-Use Cord Connected Wiring Device for an extended period of time (greater than 90 days) please consider hard wiring a permanent outdoor-use receptacle rated for year-round use in the area that power is needed. Please contact a Licensed electrician for proper installation of permanent wiring.
6. SUITABLE FOR INDOOR/OUTDOOR USE – STORE INDOORS WHILE NOT IN USE.
7. **CAUTION:** PLUG INTO GROUND FAULT PROTECTED RECEPTACLE ONLY.
8. After completion of installation, the connector shall be maintained a minimum of 6 inches above ground.

ASSEMBLY INSTRUCTIONS

1. Assemble the ground stakes.



2. Choose a location of installation in your yard, insert the ground stake into ground stake jack of LiteTunes and insert into the ground.

 


REMOTE CONTROL

Remote control functions:

Please note LiteTunes have 2 remote controls.

Please pull out the insulating tape from the remote control, before starting to use it.

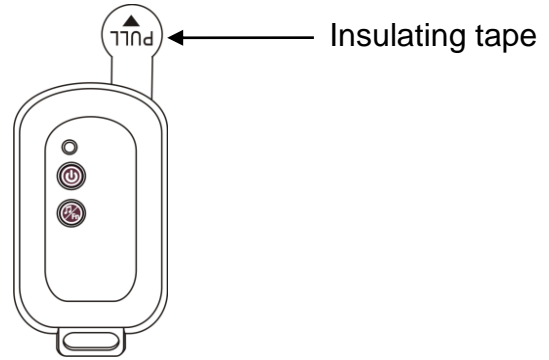

1. The first button is for the on/off power switch for the lights and the second button is for choosing different functions.
2. Connect a MP3 player (not included) to the audio cable (included) which is inserted into the audio input on the back of LiteTunes.
Press /Fn button to select from the following lighting functions:

Function 1-10:

 
- 01: Sequential
- 02: Back and Forth
- 03: Step up Flashing
- 04: Paired Flashing
- 05: Step on / Step off
- 06: Group Flashing
- 07: Random Flashing
- 08: Half and Half
- 09: Steady On
- 10: Music Synch



If the remote control does not work, check whether the battery of the remote control is out of power.

Battery installation:

1. Use Phillips screwdriver to open the back cover of the remote control.
2. Replace with a new alkaline "A23" (12 volt) battery into the compartment.

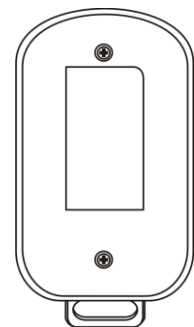

WARNING: This is not a toy and is not intended for use by children.

- A. Do not dispose of the battery in fire as the battery may leak and explode.
- B. Do not mix old and new batteries and do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- C. Exhausted batteries are to be removed from the product.
- D. Do not expose the Remote Control to moisture
- E. Dispose of battery properly by following directions on battery
- F. Use only 12v alkaline battery type A23 of replacement, use of other battery may damage remote.
- G. Safe for indoor use.

Smart phone Operating

1. Please remove the audio cable if using Wi-Fi.
2. Download application named "LiteTunes" on your smart phone. (ios: App store/android/HTC: Google play, Play Store)
**Please note - when searching for the Litetunes app, please search "LiteTunes" (with no spacing). Then scroll through the apps until you find the "menu page" (fig.3).*
3. Go to phone settings for WiFi setting. Look for "LiteTunes" and select it to get connected.
4. Please enter the wifi password: "Litetunes" to start the Lite Tunes app . (Fig. 1)
5. Start "LiteTunes " App. (Fig. 2)
6. Main Menu of LiteTunes is shown on Fig. 3.

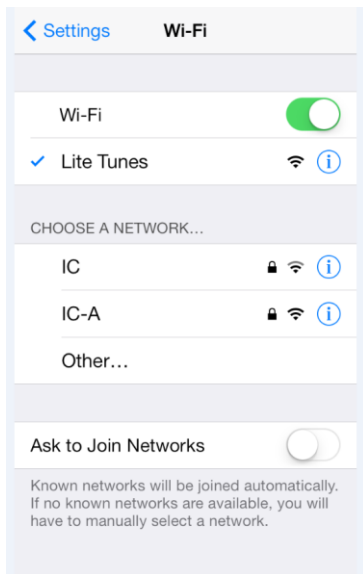 


Fig. 1



Fig. 2

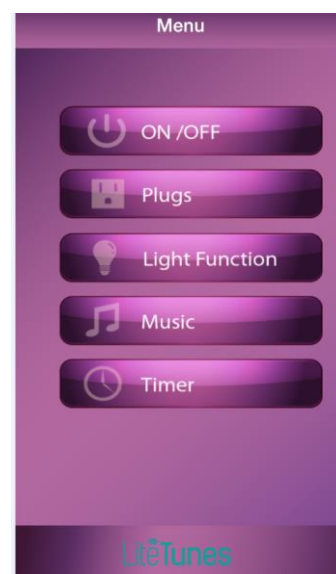 


Fig. 3

1. POWER SWITCH

This is to turn on/off the Lite Tunes.

2. FUNCTIONS SELECTION

10 functions can be cycled through by pressing light function.

The color of this icon changes after each pressing.



MUSIC PLAYER FUNCTION



1. Music Selection
2. Player Functions (from left to right):
 - Random Play
 - Back
 - Play
 - Forward
 - Stop
3. Current Music Playing Position

TIMER FUNCTION

 
Lights will stay on for the time selected.

Set the working time of Lite Tunes for 1/2/4/8/12 hours.



Working mode of 6 plugs :

Individually turn on or turn off the 6 plugs.

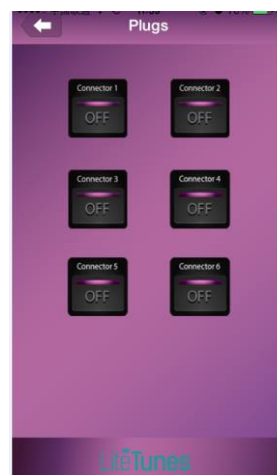

MUSIC PLAYER OPERATION FOR IPHONE USER

1. Touch the music icon from the main menu.
2. Application will automatically take you to your music playlist on your phone.
3. Select a song from your music playlist. Once selected, swipe screen from bottom to top to open new screen as pictured.
4. Towards the bottom of the newly opened screen you will touch the airplay tab. On the next screen select litetunes tab and the music will begin playing through the litetunes with the lights in sync with the music.
5. Detailed step by step images shown on Figure 1 thru 6.

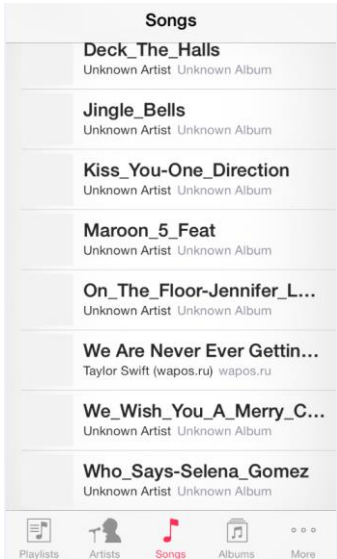 


Fig.1



Fig. 2



Fig. 3



Fig. 4

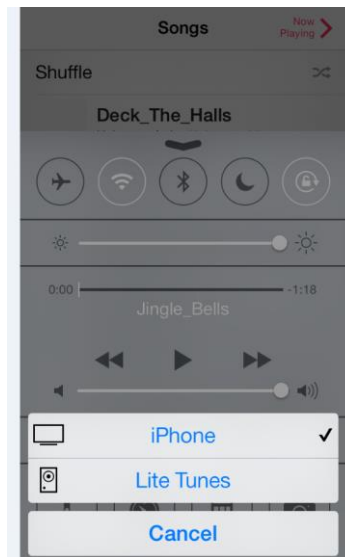 


Fig. 5

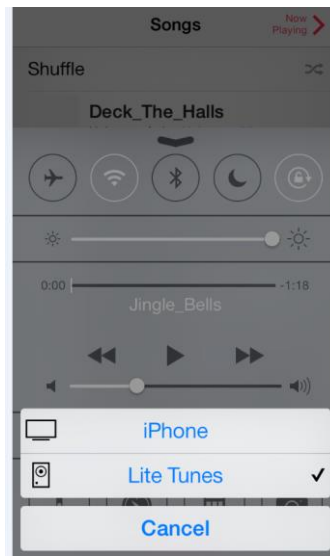 


Fig. 6

Federal Communications Commission (FCC) Statement

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐☐☐ Consult the dealer or an experienced radio/TV technician for help.

90-DAY LIMITED WARRANTY

LiteTunes warrants to the original consumer/purchaser of the LiteTunes that it will be free from defects in material and workmanship for a period of 90 days from date of purchase. Any liability of LiteTunes under this warranty shall be limited to the repair or replacement of defective parts without charge if the item is returned with shipping charges prepaid together with proof of date-of-purchase, name and mailing address of the original consumer/purchaser and a description of the defect. Please call warranty service at 1-800-681-3814 for a claim number and instructions on how and where to return the item.

LiteTunes shall not be liable for any other damages or loss. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the limitation or exclusion may not be applicable to certain consumers/purchasers.

This warranty does not cover defects caused by damage in transit, abuse, accident, negligence or repairs made by others. This warranty gives the consumer/purchaser specific legal rights. The consumer/purchaser may also have other rights which vary from state to state.

There is no need to register your purchase; however it is most important that you retain your sales receipt as proof of purchase. Receipt is required for warranty service. Please note this warranty is non-transferable and is voided if the product is not used as intended. Please contact our customer service line at 1-800-681-3814 for warranty service and trouble shooting hints.

STORAGE: Disassembled LiteTunes can be stored in its original box. Store LiteTunes in a cool dry place where the temperature does not exceed 100 degrees Fahrenheit.

SYLVANIA is a registered trademark of OSRAM SYLVANIA INC. used under license.