


IMPORTANT INSTRUCTIONS FOR FAN-FORCED HEATER USE

Please note: The TH106 comes factory set in baseboard mode. If using the TH106 to control a fan-forced heater, you must change the setting.

To change the setting: The configuration switches are on the back of the thermostat. Change factory setting SW3 to the ‘ON’ position (5 minute cycle length). See page two of your thermostat Owner’s Guide, Section 3, Item CONFIGURATION for more detailed instructions.

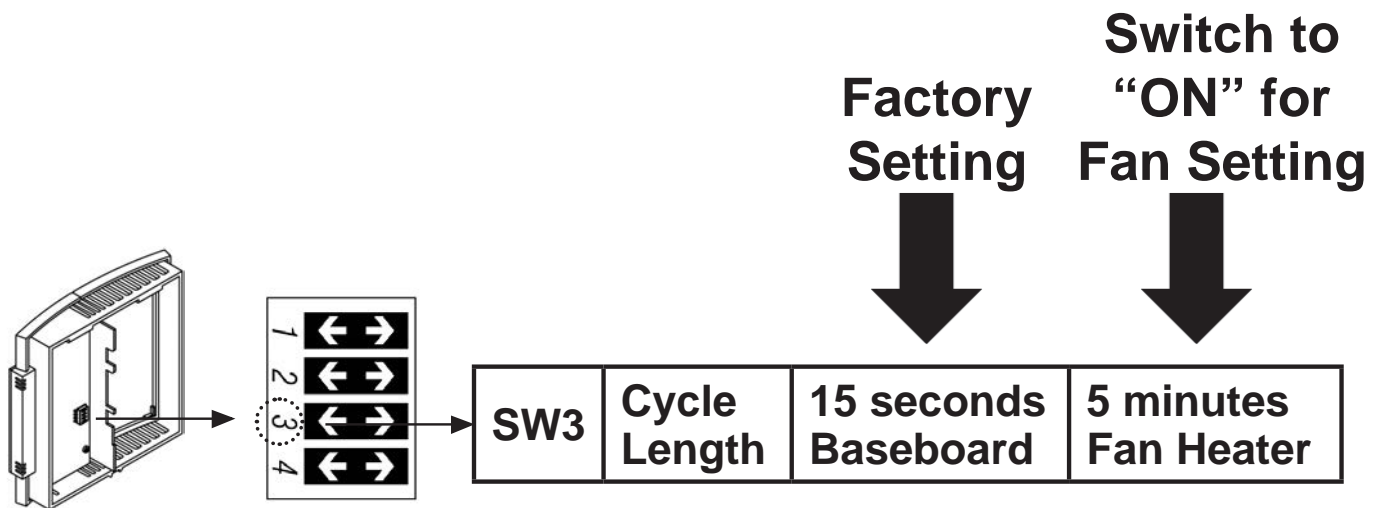

Instructions are also available on our website at cadetheat.com