 
 


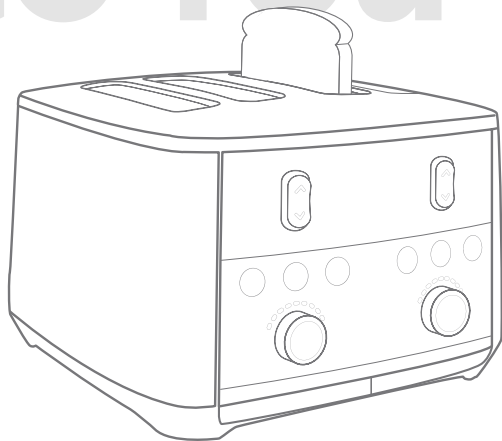

# Up to You

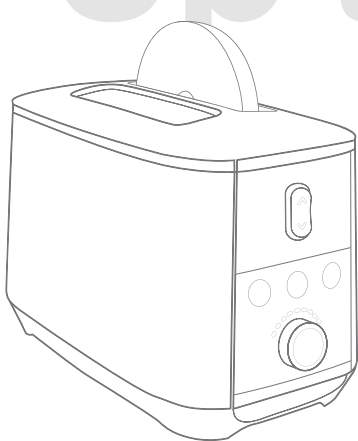

---

**2-SLICE/4-SLICE MOTORIZED TOASTER  
INSTRUCTIONS FOR USE**

---



**CONGRATULATIONS**  
on your new OXO On appliance!

---

Don't forget to register your product  
at [OXO.com/registration.aspx](https://OXO.com/registration.aspx)  
for updates and other relevant information.

Although greatly appreciated, product registration is not required to activate any warranty.

---

## Toast, as you like it

---

Everybody's definition of "perfect" toast is a little different. Some like it dark, some light, and others somewhere in between.

The OXO 2-Slice and 4-Slice Motorized Toasters have nine digital settings, allowing everyone to find their perfect shade. Want more control? The LED countdown shows exactly how much time is left, but our take-a-peek feature lets you check in on the toasting progress mid-cycle; the "a little extra" function will give you extra toasting if you want it.

Defining "perfect" toast is up to you; delivering it is up to us!

---

<b>A Note About Safety .....</b>	<b>3</b>	<b>Troubleshooting.....</b>	<b>12</b>
<b>Before We Begin.....</b>	<b>5</b>	<b>Cleaning, Care and Storage...13</b>	
<b>Quick Start Guide .....</b>	<b>6</b>	<b>Our Guarantee .....</b>	<b>14</b>
<b>Meet Your Toaster .....</b>	<b>7</b>	<b>Registration Info .....</b>	<b>14</b>
<b>The Particulars of Toasting ....</b>	<b>9</b>		

---

## A Note About Safety



# IMPORTANT SAFEGUARDS

### Read all instructions.


When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- **Read All Instructions.** Use this product only as described in this manual.
- Keep the packaging material (cardboard, plastic, etc.) out of the reach of children (danger of asphyxiation or injury).
- Do not touch hot surfaces. Toaster surfaces are hot during and after operation. To prevent burns or personal injury, use handles or knobs whenever possible. Always use protective hot pads or insulated oven mitts.
- To avoid possibility of fire, do not leave Toaster unattended during use.
- To protect against electrical shock do not immerse cord, plugs or Toaster in water or other liquid. Do not operate near running or standing water.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not place the Toaster near the edge of a bench or table during operation. Ensure the surface is level, clean and free of water.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off,” then remove plug from wall outlet.
- Always operate the Toaster on a stable, heat resistant surface.
- A fire may occur if the Toaster is covered or touching flammable material, including curtains, draperies, walls and the like, when in operation. Make sure the area around the Toaster is clear before operating.
- Do not allow hot surfaces of the Toaster to come in contact with any surface, including walls, countertops or tables.
- Do not use appliance with damaged, twisted or frayed power cord. Only store as directed.
- Do not place the Toaster on or near a hot gas or electric burner or in a heated oven.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner or is not operating properly. Contact OXO Customer Service at 1-800-545-4411 for examination, repair, or adjustment inquiries. Do not return to store.
- Do not operate the Toaster under cabinetry or in enclosed areas.
- Do not move Toaster while in operation.
- Avoid contact with moving parts.
- Do not place bread or any other item directly on top of toasting slots as this may prevent correct air circulation and damage the appliance.
- Do not attempt to dislodge food when the Toaster is plugged in. To prevent electric shock, unplug before cleaning.

- Oversized foods, metal foil packages, or utensils must not be inserted into the Toaster as they may involve a risk of fire or electric shock.
- Do not use the Toaster without the removable crumb tray(s) in place. Do not allow crumbs to build up in the crumb tray. Failure to clean the crumb tray regularly may result in a fire hazard.
- Do not put liquid or substances that may melt inside the Toaster.

- Do not use appliance for other than intended use.
- Do not use outdoors.
- **WARNING!** To reduce the risk of fire or electric shock, **do not remove the bottom cover.** Doing so will void warranty. No user serviceable parts are inside. Repair should be done by authorized service personnel only.
- **This appliance is intended for household use only.**

## SAVE THESE INSTRUCTIONS.

 **WARNING! Shock Hazard:** This appliance is equipped with a power cord that has a grounding wire with grounding plug. The appliance must be grounded using a 3-hole properly grounded outlet. In the event of an electrical short circuit, grounding reduces the risk of electric shock. If the power outlet is a standard 2-prong wall outlet, it is your personal responsibility and obligation to have it replaced with a properly grounded 3-prong outlet. **Do not, under any circumstances, cut or remove the third (ground) prong from power cord or use adaptor.** Consult a qualified electrician if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.

### SHORT CORD STATEMENT

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in, or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of this appliance.

Care must be taken to arrange the extension cord so that it will not drape over or against the Toaster, or in an area of the countertop or tabletop where it can be pulled on by children or tripped over.

To avoid an electrical circuit overload, do not use any high wattage appliance on the same circuit as this appliance.

 **WARNING!** 

### SHOCK HAZARD

ONLY FOR USE WITH 110V AC OUTLET.

DO NOT USE ADAPTER.

FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN DEATH, FIRE OR ELECTRICAL SHOCK.

 This symbol alerts you to important operating and service instructions.


 **WARNING!**   
RISK OF FIRE OR ELECTRIC SHOCK  
DO NOT OPEN

WARNING, TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK,

DO NOT REMOVE COVER (OR BACK)

NO USER-SERVICEABLE PARTS INSIDE

REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY

 This symbol alerts you to the risk of fire or electric shock in the accompanying message.

## Before We Begin

1. Remove and recycle or discard all stickers, descriptive labels, cable ties and packing materials, including static stickers and hangtags with ties.
2. Wipe body of appliance with a soft, damp cloth and dry thoroughly.

**⚠ CAUTION:** Do not use abrasive pads, harsh chemicals or spray cleaner chemicals to clean. These may damage the surface of the appliance.

3. Check to make sure crumb tray(s) is/are in place and the toast slots are empty.
4. OXO recommends running two toasting cycles without bread in a properly ventilated room.

**NOTE:** Toaster may emit a thin smoke or distinct odor on initial use. This is normal and not detrimental to the performance of the Toaster.

## Quick Start Guide

1. Plug power cord into 110V outlet.
2. Insert one slice of bread per slot.
3. Choose browning level by twisting the dial.



4. Press the “down” arrow to lower the elevator and start the toasting cycle.

**NOTE:** Press “up” arrow once to take a peek and press the flashing “down” arrow once to continue toasting. To cancel the toasting cycle at any time, press the “up” arrow twice.



5. To learn more about how to use your Toaster, check out “The Particulars of Toasting” on pg. 9.



### CONVENIENT CORD WRAP

Cord can be stored easily and neatly using the cord wrap underneath Toaster



### WIDE SLOTS

Generous, self-centering slots accommodate a variety of bread and bagel thicknesses



### FINGERPRINT FREE

Sleek, stainless steel body resists fingerprints



### DEFROST FUNCTION

Thaw frozen bread and bagels before toasting



### BAGEL FUNCTION

Toast only one side of the bagel, leaving the other side soft and warm



### LED COUNTDOWN DISPLAY

Progress indicator lets you know how much of the toasting cycle remains



### LAST SETTING MEMORY

Your last setting will be the first thing your toaster suggests to speed things along

## Meet Your Toaster

The 2-Slice and 4-Slice Toasters are different in size, but identical in function.



### MOTORIZED ELEVATOR

Quiet motor gently lowers and raises bread — no more flying toast!



### UP & DOWN BUTTONS

Raise and lower toast, or take a peek to check progress without stopping or restarting the toasting cycle



### “A LITTLE EXTRA” FUNCTION

Add 30 seconds to the cycle if your toast is not quite dark enough, or if it cools off before you can enjoy it





### INTUITIVE LED INTERFACES

Backlit, easy-to-read interfaces help you customize your toast



### DEEP CRUMB TRAY(S)

Removable tray catches crumbs and seeds, and is accessible from the front for easy emptying

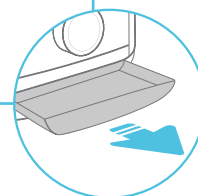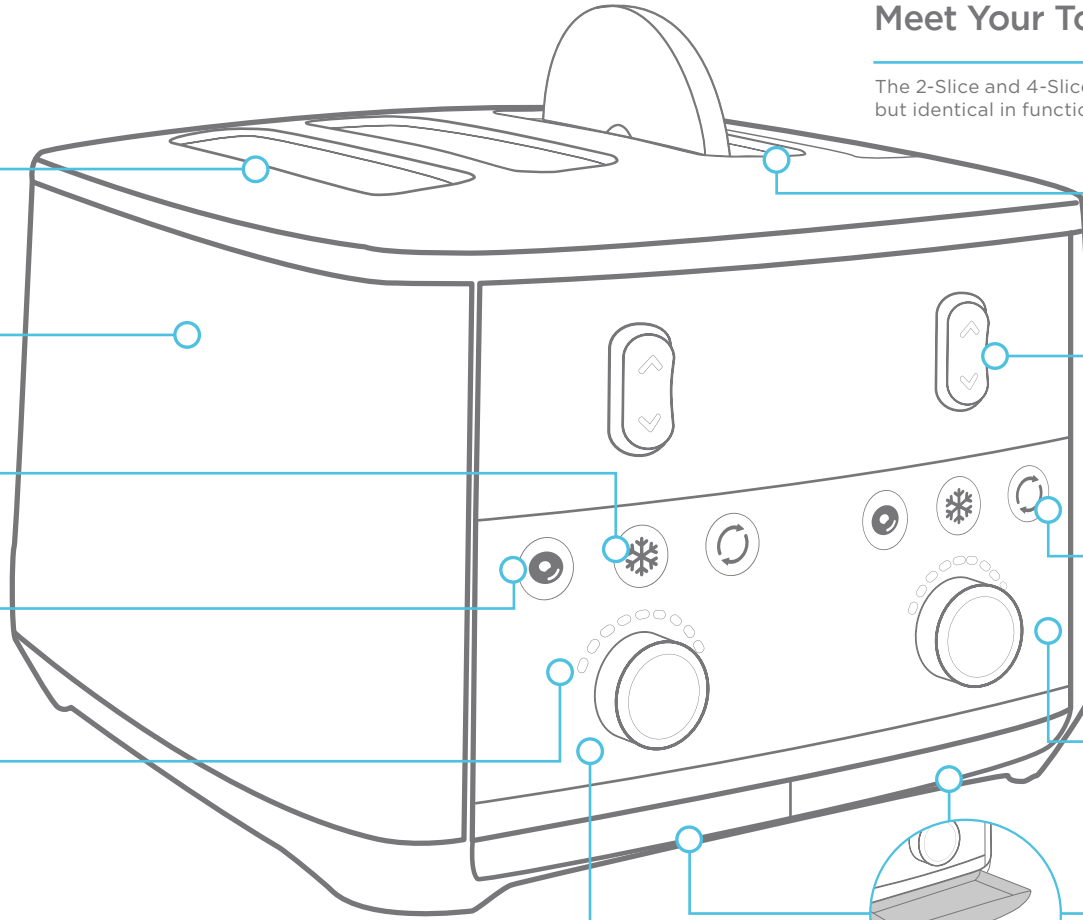


# The Particulars of Toasting

## TO TOAST BREAD:

During the default toasting cycle, all heating elements are on until the chosen darkness setting is reached or until the cycle is cancelled.

1. Place Toaster on a stable, flat surface.
2. Plug power cord into 110V outlet.
3. Insert one slice of bread per slot. When toasting a single slice of bread, place bread in the rightmost slot.
4. Twist dial to select browning level.

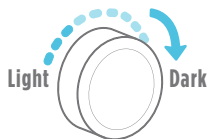

5. Press the “down” arrow to lower the elevator and start the toasting cycle.
  - a. The darkness level dots will count down to let you know when the cycle will end.



- b. Adjust the browning setting at any time during toasting by twisting the dial.
  - c. Bagel (pg. 10) and defrost (pg. 11) settings can be turned on/off at any point during toasting. The bagel and defrost LEDs will remain partially lit during the toasting process, and will brighten upon selection to indicate they are in use.
6. To check on your toast, use the take-a-peek function. (see pg. 10)

7. To cancel the cycle at any time, press the “up” arrow twice. The elevator will raise toast and the unit will “beep” to indicate the cycle has ended.
8. When the toasting cycle finishes, your toast will automatically be raised and the unit will “beep.”
9. Unplug your Toaster from outlet after use.

### NOTE:

- Uneven toasting is usually due to bread slices of uneven thickness and varying moisture or sugar content.
- Your darkness setting is saved between toasting sessions so your Toaster will revert to the last setting used.
- Your OXO On Toaster is designed with a **fail-safe feature** that prevents the unit from overheating. When an overheat scenario is detected, the heating elements are disabled and the unit cools down quickly.

### CAUTION:

- The top of the Toaster gets hot while in use. Do not touch during or after toasting.
- Do not use Toaster without the crumb tray installed.


### WARNING:

- Always unplug Toaster before cleaning and/or dislodging bread.
- Do not use a knife or other tool to remove bread from the Toaster.
- Never touch the internal parts of the Toaster.
- Never force food into the toasting slots.
- Do not place buttered breads, pastries with fillings or frostings, sandwiches, or other food in the Toaster, as this could create a fire hazard. The Toaster is only intended to toast sliced bread, bagels, and other such dry bread products.

## TO TOAST BAGELS:

When the bagel setting is activated, power is only directed to the center heating elements, toasting the cut side of your bagel and leaving the other side soft and warm.

1. Before toasting, slice each bagel into two equal halves.
2. Place halved bagel into the toasting slots with the cut sides facing each other following the graphics on the top of the Toaster. When toasting one half of a bagel, place it in the rightmost slot.

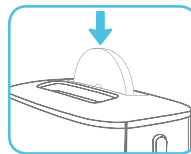

3. Twist dial to select the browning level.
4. Press the bagel button. Illuminated LED indicates the feature is activated.



When bagel mode is activated, the “a little extra” button LED turns off to indicate the feature is disabled. The bagel LED will pulse until cycle is finished.


5. If defrosting a bagel, also press the defrost button. The defrost LED will pulse until cycle is finished, then the bagel cycle will begin.
6. Press the “down” arrow to lower the elevator and start the bagel toasting cycle.
  - a. To adjust the browning setting during toasting, twist the control dial.
  - b. Bagel setting can be turned on/off at any point during the cycle.

7. To check on your bagel, use the take-a-peek function. (below)
8. To cancel the cycle at any time, press the “up” arrow twice. The elevator will raise toast and the unit will “beep” to indicate the cycle has ended.

9. When the toasting cycle finishes, your bagel will automatically be raised and the unit will “beep.” Unplug your Toaster from outlet after use.

## TO TAKE A PEEK:

Easily check the progress and darkness of your toast during any function without ending or shortening the toasting cycle.

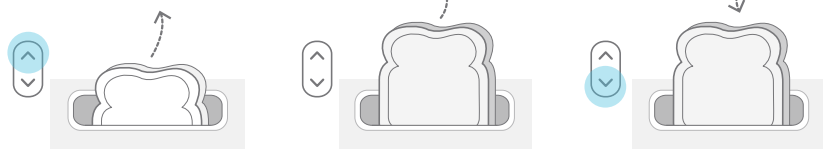

1. Press the “up” arrow to pause the toasting/heating cycle and raise the elevator.
2. Take a peek and check the progress of your toast.
3. If your toast needs more time, press the flashing “down” arrow to lower elevator and resume cycle.
4. If your toast is done, press the “up” arrow again to turn Toaster off.
5. If no action is taken, take-a-peek function will time out after 12 seconds and Toaster will automatically turn off.

**NOTE:** Take care to avoid touching hot areas of the Toaster while using the take-a-peek function.

## FOR “A LITTLE EXTRA” TIME:

The “a little extra” function adds 30 seconds to the cycle if your toast is not quite dark enough or if it cools off before you can enjoy it.

**NOTE:** The “a little extra” function is only available at the end/beginning of a cycle. Button is off/dark while cycle is in process.

1. Insert one slice of bread per slot. When heating one slice of bread, place bread in the rightmost slot.
2. Press the “a little extra” button. The elevator will automatically lower toast and the cycle will start. Illuminated LED indicates the feature is activated.
3. When the cycle finishes, your toast will automatically be raised and the unit will “beep.” To cancel before the “a little extra” cycle finishes, press the “a little extra” button or the “up” arrow.



When “a little extra” function is activated, bagel and defrost LEDs turn off to indicate these features are disabled. The “a little extra” button LED will pulse until cycle is finished.

## TO DEFROST AND TOAST FROZEN BREAD OR BAGELS:

Defrost mode first defrosts and then toasts, all in the same cycle. All heating elements are on during the defrost cycle.

1. Insert one slice of frozen bread per slot. When defrosting one slice of bread, place bread in the rightmost slot.
2. Twist dial to select browning level.
3. Press the defrost button. Illuminated LED indicates the feature is activated.
4. If defrosting a bagel, press the bagel button in addition to the defrost button.
5. Press the “down” arrow to lower the elevator and start the defrost/toast cycle.
6. Once the defrost cycle times out or is cancelled, the chosen toast cycle will start/resume.
7. To check on your toast, use the take-a-peek function. (see pg. 10)
8. To cancel the cycle at any time, press the “up” arrow twice. The elevator will raise toast and the unit will “beep” to indicate the cycle has ended.



When defrost is activated, the “a little extra” button LED turns off to indicate the feature is disabled. The defrost LED will pulse until cycle is finished.

4. If defrosting a bagel, press the bagel button in addition to the defrost button.

### NOTE:

- The defrost cycle is based on the time necessary to thaw a frozen slice of bread of average thickness and density. Thin frozen bread may require less toasting time in addition to defrosting, while thick/dense frozen bread may require more toasting time.
- The defrost setting can be turned on/off at any point before or during a normal toasting cycle by pressing the defrost button.

## Troubleshooting

You have questions, we have answers. For more information, call OXO Customer Service at 1-800-545-4411.

Question/Problem	Explanation/Solution
Bread is stuck in elevator	➔ Unplug Toaster and let it cool before attempting to remove bread. Never use a metal tool to remove stuck bread.
Bread is toasting unevenly	➔ This is usually due to bread slices of uneven thickness and/or moisture content.
Toaster is emitting smoke or burnt smell	➔ <ol style="list-style-type: none"><li>1. If it is the first use, this should naturally resolve itself.</li><li>2. This could be due to food particles near or touching the heating elements, or a full crumb tray. See cleaning instructions on pg.13 to learn how to clean your crumb tray. To remove any small pieces of bread left in the Toaster, ensure it is unplugged, then turn the Toaster upside down.</li></ol>
Elevator cage is stuck in the open position when elevator is lowered	➔ The internal mechanism may be jammed. Unplug Toaster, allow to cool, and pull the cage walls towards the center of the slot until they move freely.
Display went from full brightness to dim	➔ The Toaster does this automatically, and will also go from dim to off when not in use.
The “a little extra” function does not work	➔ Remember that the “a little extra” function only works before or after a cycle. The function is not available while a toasting cycle is in process.

---


## Cleaning, Care and Storage

---

### TO CLEAN YOUR TOASTER:

Any service or maintenance other than cleaning should be performed by an authorized service representative. For more information, call OXO Customer Service at 1-800-545-4411.

1. Always unplug power cord from outlet and allow Toaster to cool completely before cleaning.
2. Remove crumb tray(s) from the front of the Toaster by pulling straight out. Empty crumb tray(s) and wipe clean with a damp cloth. Replace crumb tray(s) before using the Toaster.
3. To clean any additional crumbs, turn Toaster upside down. After righting Toaster, check crumb tray again.
4. Wipe the body of the Toaster with a damp cloth and dry completely with a soft, dry cloth.

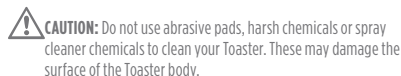

### STORAGE:

Unplug power cord from outlet and allow Toaster to cool completely before storing. Follow cleaning instructions and store in an upright position. The cord wrap under the Toaster may be used for tidy cord storage. Do not store anything on top of your Toaster.



#### **ELECTRICAL SHOCK HAZARD:**

**NEVER IMMERSE THIS APPLIANCE, POWER CORD OR POWER PLUG IN WATER OR ANY OTHER LIQUID. DOING SO CAN RESULT IN DEATH OR ELECTRICAL SHOCK.**

---

## Our Guarantee

---

### TWO-YEAR WARRANTY:

We guarantee everything we make! Starting from the date of purchase, your OXO On 2-Slice and 4-Slice Motorized Toasters are guaranteed by OXO for two years in the case of any manufacturing defects in materials or workmanship. This OXO warranty is only offered on OXO On appliances sold and used in the US and Canada.

The OXO warranty covers all costs related to restoring the proven defective product through the repair or replacement of any defective part and necessary labor so that it conforms to its original specifications. A replacement product may be provided instead of repairing a defective product. OXO's exclusive obligation under this warranty is limited to such repair or replacement.

**A receipt indicating the purchase date is required for any claims, so please keep it in a safe place.** We recommend that you register your product on our website, [www.oxo.com/registration.aspx](http://www.oxo.com/registration.aspx). Although greatly appreciated, the product registration is not required to activate any warranty and product registration does not eliminate the need for the original proof of purchase.

The warranty does not cover damages resulting from misuse or abuse of the product and/or uses inconsistent with this Use and Care manual, attempts at repair, theft, use with unauthorized attachments or failure to follow the instructions provided with the product.

The warranty becomes void if attempts at repair are made by non-authorized third parties and/or if spare parts, other than those provided by OXO, are used.

You may also arrange for service after the warranty expires at an added cost.

For questions, returns, repairs or warranty claims within the US, please visit [www.oxo.com](http://www.oxo.com) or contact OXO Customer Service at **(800) 545-4411**. We will be glad to assist you.

For customer service, claims or questions on sales in Canada, OXO Customer Service will gladly put you in touch with the appropriate individuals.

This warranty gives you specific legal rights, and you may have other legal rights which vary from state to state, country to country or province to province. The customer may assert any such rights at their sole discretion.

### CONTACT INFO:

If you have any trouble with the product during the warranty period, do not attempt to return it to a retail store. Instead, please visit us online at [www.oxo.com](http://www.oxo.com) or contact us at:

#### **OXO U.S. Customer Service**

**Hours:** Monday – Friday, 8:00am – 5:00pm (ET)

**Phone:** (800) 545-4411 **Fax:** (717) 709-5350

**Mail:** OXO International, Inc. at 1331 S Seventh St. Ste 4,  
Chambersburg, PA 17201-9912

**Email:** [info@oxo.com](mailto:info@oxo.com)

#### **Outside the U.S.**

Please contact your local distributor or email [info@oxo.com](mailto:info@oxo.com)

### REGISTRATION INFO:

For product registration, please visit us online at [www.oxo.com/registration.aspx](http://www.oxo.com/registration.aspx) or call toll free at **1-800-545-4411**.

Please be advised that as part of our privacy policy we never sell or give away your private information.



---

## It's On

---

For over 25 years, OXO's mission has been to provide innovative consumer products that make everyday living easier.

How do we do it? We study people – lefties and righties, male and female, young and old – interacting with products and we identify opportunities for meaningful improvement. Our “question everything” process and relentless attention to detail allow us to design products that help consumers make short work of everyday tasks.

We've applied the same philosophy to OXO On, our line of intelligent kitchen appliances. Through intuitive interfaces, innovative digital controls and backlit LED displays, our On appliances give you the simplicity, functionality and thoughtfulness you've come to expect from OXO...

...all with the touch of a button.

©2015

OXO International Ltd.

1 Helen of Troy Plaza

El Paso, TX 79912

Printed in China

IB-8710500-00