

# SNAPWARE TOTAL SOLUTIONS USE & CARE

---

**Read these instructions and warranties carefully and save them for future reference.** For more information, visit [www.snapware.com](http://www.snapware.com) or call the World Kitchen Help Center at 1-800-999-3436.

## WARNINGS

**FAILURE TO FOLLOW THE WARNINGS BELOW MAY RESULT IN PERSONAL INJURY OR PROPERTY DAMAGE, OR MAY CAUSE YOUR GLASSWARE TO BREAK OR SHATTER**

**IMMEDIATELY OR LATER. Avoid Sudden Temperature Changes to your Glassware.** To avoid risk of breakage due to a sudden temperature change to your PYREX® glassware, **DO NOT** add liquid to hot glassware, place hot glassware on a wet or cool surface, or handle hot glassware with a wet towel, wet potholder or other wet cloth. **DO NOT** place hot glassware directly on a countertop or any metal surface, or in the sink. Allow hot glassware to cool on a cooling rack, dry potholder or dry cloth. Be sure to allow hot glassware to cool as provided above before washing, refrigeration or freezing.

**Oven Must be Preheated Before Inserting Glassware. DO NOT** insert glassware into oven for cooking or reheating until the oven has been preheated to the desired temperature.

**DO NOT Use on or Under a Flame or Other Direct Heat Source,** including on a stovetop, under a broiler, on a grill or in a toaster oven.

**Add Liquid to the Bottom of Glassware when Cooking Certain Foods.** When preparing food that may release liquid, add a small amount of liquid sufficient to cover the bottom of the glassware prior to cooking.

**DO NOT:** use glassware to microwave popcorn or foods wrapped in heat-concentrating material (such as special browning wrappers); heat empty or nearly empty glassware in the microwave; or overheat oil or butter in microwave (use minimum cooking time). Plastic lids should be removed for reheating purposes. Always loosen latches and remove lid.

**Be Careful When Handling Broken Glass.** Broken glass pieces may be extremely sharp and difficult to locate.

**DO NOT** use or repair any glassware that is broken, chipped, cracked or severely scratched.

**DO NOT** drop or hit glassware against a hard object.

**DO NOT** strike utensils against glassware.

### **HOW TO CARE FOR YOUR PYREX® GLASSWARE:**

PYREX® glassware and SNAPWARE® lids are dishwasher safe, and may also be washed by hand. When using dishwasher, load dishes to avoid bumping against other items during dishwashing cycle. Use non-abrasive cleansers. If scouring is necessary, use only plastic or nylon cleaning pads, again with non-abrasive cleansers.

## **SNAPWARE® PLASTIC LIDS**

Can be used in a microwave oven, refrigerator or freezer.

**DO NOT** use in a conventional or convection oven.

**DO NOT Use On or Under a Flame or Other Direct Heat Source**, including on a stovetop, under a broiler, on a grill or in a toaster oven. In order to make use of the write-on space on your lid please follow these instructions:

**To Write On:** Use a soft tip non-toxic permanent marker or a soft tip wet erase marker. Writing should be contained to the “write here” area and marking on the textured areas should be avoided. You will not be able to remove the ink if it is on the texture area.

### **To Remove Markings:**

**Wet Erase Marker** - Simply wash the lid by hand or in the dishwasher.

**Permanent Marker** - Gently rub off using a soft dry dish cloth, paper towel or tissue.

**Other Considerations:** Should the ink become hard to remove, you can use a few drops of isopropyl alcohol to remove writing.