

Thank you for buying a Texsport Authentic Adventure Gear product. We hope you enjoy your new heater and that it will serve you for many years to come. We encourage you to read and understand each step of the set-up and safety operation instructions prior to working with this heater.


FOR OUTDOOR USE ONLY

GENERAL SAFETY INFORMATION



- DO NOT allow heater to operate while sleeping.
- DO NOT expose the propane cylinder to excessive heat.
- Always inspect the heater, propane cylinder and connections for damage, debris or dirt before attaching the heater/cooker to the propane cylinder.
- Always attach/detach propane cylinder outdoors away from any open flame or pilot lights and only when the heater is cool.
- DO NOT use or operate if the heater or propane cylinder is damaged.
- When storing or transporting heater always disconnect the propane cylinder and store it in a cool, well ventilated location, in an upright position.
- Be sure connection to propane cylinder is tightly secure (hand tighten only) prior to each use.
- Never operate the heater near any flammable liquid or vapors. Keep all flammable or combustible materials beyond the clearance zone as indicated on page 4 of this manual.
- Discontinue operation of the heater and close valve if:
 - ambient temperature drops below -10° F.
 - there is no fuel remaining in the propane cylinder
 - combustion becomes unstable
 - lighting cannot be performed quickly and easily
 - you experience repeated flame outs
- Should blockage occur in the fuel jet do not attempt to clear with a metal object. Call Texsport Customer Service at 800-231-1402 8AM – 5PM CST Mon-Fri.
- Never leave heater unattended when hot or in use.
- **KEEP OUT OF REACH OF CHILDREN.**

INSTRUCTIONS FOR USE

CONNECTING THE PROPANE CYLINDER

- Step 1Use only the approved 16.4 oz/465 g disposable propane cylinder approved for use by the United States Department of Transportation DOT-NRC 232/290 M1110.
- Step 2Remove plastic protector cap from valve adapter connection
- Step 3Make sure that the valve knob is turned off. Twist in a clockwise direction. 
- Step 4Make sure heater auto shut-off valve adapter rubber seal is clean and undamaged and in its proper centered position.
- Step 5Attach the propane cylinder onto the heater auto shut-off valve adapter (hand tighten only).
- Step 6Please check the connector for leaks using soapy water. Bubbles will form if there is a leak present. NEVER USE A FLAME.
- Step 7When you are sure there are no leaks you may proceed to lighting your heater.

LIGHTING YOUR HEATER

- Step 1Open the valve to a low or medium setting. Twist in a counter clockwise direction. 
- Step 2Place a flame source near the face of the burner and at the same time press the RED starter button. Gas will begin to flow and the burner will ignite.
- Step 3Continue to press the RED starter button down for 60 Seconds to assure continuous gas flow.
- Step 4If heater fails to light, turn off  the valve. Allow any gas to dissipate and repeat steps 1-3.
- Step 5If heater still does not light – contact Texsport Customer Service at 800-231-1402 8AM – 5PM CST Mon-Fri.

USING YOUR HEATER

- Step 1After burner has ignited, adjust valve to desired heat level.
- Step 2While ignited DO NOT touch the metal reflector or safety grid.
- Step 3Keep children, pets and flammable materials well away from ignited burner. See clearance zone diagram on page 4 of this booklet.
- Step 4Handle only by grasping the metal frame.
- Step 5Allow heater to cool for 15 minutes before storage.


MAINTENANCE

Be sure to keep equipment clean and make sure burner is always unobstructed. Propane appliances seldom require service as long as you keep valves and orifices away from dirt and dust. Always blow the valve clean before connecting it to a cylinder. If damaged DO NOT use the appliance and contact Texsport Customer Service at 800-231-1402 8AM – 5PM CST Mon-Fri.

DO NOT PERFORM MAINTENANCE WHILE THE HEATER IS STILL HOT.
PLEASE ALLOW ADEQUATE TIME TO COOL.

MINIMUM CLEARANCE TO FLAMMABLES OR COMBUSTIBLES

Please keep heater away from any flammable or combustible materials or objects. DO NOT allow any fabric, clothing or any flammable or combustible material to come within the following distance restrictions.

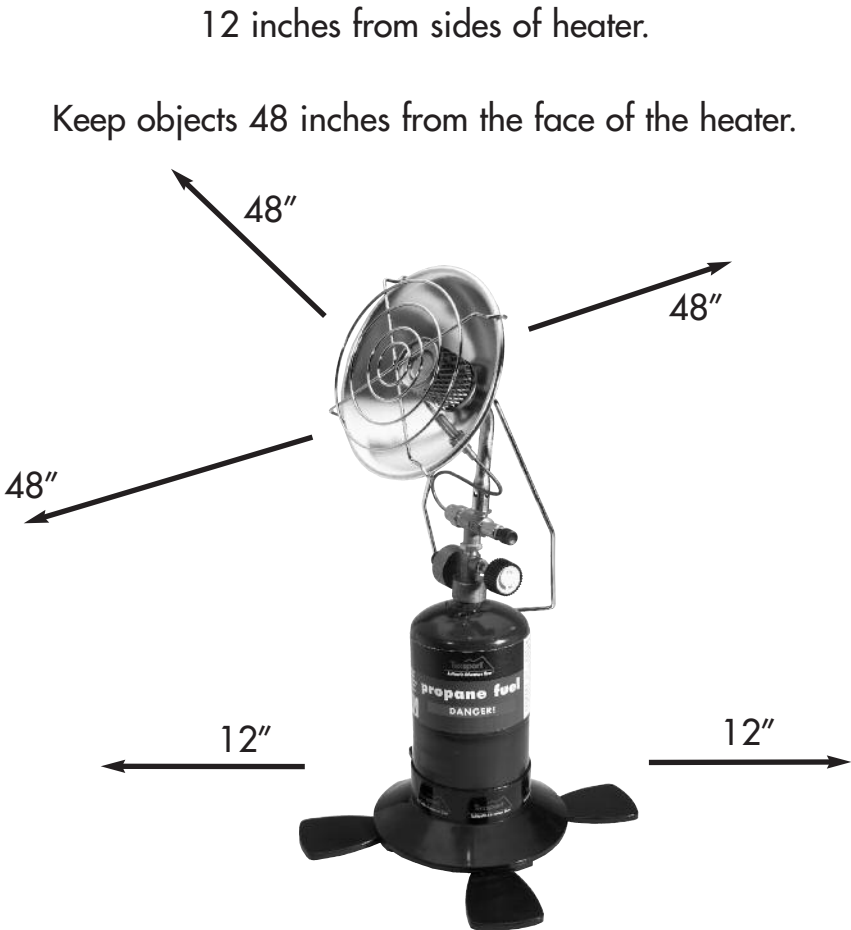



1. Steel Reflector
2. Nickel plated grid
3. Heating element/burner
4. Temperature sensor
5. Carry handle
6. Adjustable heat control valve
7. Red starter button
8. Auto shut-off valve adapter for propane cylinder
9. Plastic paddlefoot base
10. Disposable propane cylinder

CONTACT INFORMATION

If you should have any questions, problems or comments, please call our Customer Service Department at 1-800-231-1402. This Department is open 8AM – 5PM CST Mon-Fri. www.texsport.com

DANGER

**NEVER USE THIS
APPLIANCE IN AN ENCLOSED
SPACE SUCH AS CAMPER,
TENT, CAR OR HOME.**

**USING IT IN AN ENCLOSED
SPACE CAN KILL YOU.**

**USE OUTDOORS
ONLY!**

***KEEP THIS MANUAL FOR
FUTURE REFERENCE.***



Operating Manual

ITEM# 14215

**Propane
Heater**

IMPORTANT

Read this manual carefully before assembling,
using or servicing this heater.

KEEP THIS MANUAL FOR FUTURE REFERENCE.

FOR YOUR SAFETY

IF YOU SMELL GAS:

- Do not attempt to light the appliance.
- Extinguish any open flame.
- Disconnect from fuel supply.
- If smell persists leave the area.

FOR YOUR SAFETY

NOTE: DO NOT STORE OR USE GASOLINE OR
OTHER LIQUID WITH FLAMMABLE VAPORS IN THE
VICINITY OF THIS OR ANY OTHER APPLIANCE.

! DANGER !

CARBON MONOXIDE HAZARD

- This appliance can produce carbon monoxide which has no odor.
- Using it in an enclosed space can kill you.
- Never use this appliance in an enclosed space such as camper, tent, car or home.

! WARNING !

Misuse of this appliance can lead to fire, explosion
and serious personal injury to you or others.

Follow all instruction here, or on your
lantern and on the propane cylinder.