

INSTRUCTIONS

SPECIFICATIONS: AWG 16/3 SJTW power cord.
ELECTRICAL RATINGS: 10A/125V/1250W/60Hz.

Installation:

1. Connect the two pieces of the yard stake together by screwing the lower stake (C) into the upper stake (B).
2. Attach the yard stake to the outlet (A) by screwing the stake assembly into the base of the outlet (A). Be sure to firmly tighten the stake assembly to the outlet (A) before installing into the ground.
3. Insert the stake 6 inches into the ground.
 - OPERATION: Once assembled, plug the yard stake into a grounded outlet (total wattage should not exceed 10 amp or 1,250 watts)
 - Lift the rotate the dial counterclockwise to the desired setting.

SELECT	DESCRIPT
OFF	Power Off
ON	Power On
Sensor	On automatically at dusk and off at dawn
2 Hrs	On at dusk, On for 2 hours, then Off
4 Hrs	On at dusk, On for 4 hours, then Off
6 Hrs	On at dusk, On for 6 hours, then Off
8 Hrs	On at dusk, On for 8 hours, then Off

Safety Information

Modifications not approved by the party responsible for compliance will void user's authority to operate the equipment.

CAUTION:

- Risk of fire. Not for permanent installation. Use only with outdoor equipment, Christmas tree, or other seasonal decorative-lighting products having a total of 10 Amp maximum. Do not install or use this product for more than a 90-day period.
- If using Christmas tree or decorative lighting products that are not marked with an amp rating, connect no more than 140 screw-base lamps (C7 or C9) or 12 strings with push-in lamps to this cordset.
- Cordset should be plugged into a GFCI-protected receptacle.
- If using an outdoor-use cord set for an extended period of time (greater than 90 days), consider hard wiring a permanent outdoor-use receptacle rated for year-round use in the area power is needed. Contact a licensed electrician for proper installation of permanent wiring.
- After installation, connector must be kept a minimum of 6 inches above ground.
- SUITABLE FOR INDOOR/OUTDOOR USE – STORE INDOORS WHILE NOT IN USE.
- CAUTION: PLUG INTO GROUND FAULT PROTECTED RECEPTACLE ONLY.

WARNING: Federal Communications Commission Interference Statement

This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.


NOTE: Position yard stake away from other light sources. If it is too close to other light sources, or if the photocell is facing a light source other than the sun (such as a porch light or street lamp), the yard stake may shut off outside of the timer setting you chose. If this happens, relocate yard stake or eliminate other light sources. Keep yard stake and power cord out of common walkways to prevent tripping.

Care and Maintenance

- Store indoors in dry location.
- Always unplug when not in use.
- Do not unplug by pulling on cord.

Troubleshooting

Problem	Possible Cause	Corrective Action
Lights do not turn on, even when timer is in "On" position.	Lights are not in "ON" position, lights are not functioning, or timer is not receiving power.	Be sure that lights are functional by plugging them directly into the outlet. Be sure that lights are in "ON" position if they have their own switch. Be sure that the outlet that the timer is plugged into is active.
Lights do not turn off at the requested time.	(1) Check to see that the off position is set correctly on timer dial. (2) Other lights sources can affect the photocell operation. This can delay the lights turning off.	(1) Confirm the dial is in the correct position by carefully listening for the clicking sound. (2) Please move other lights source away from timer to ensure your timer will work properly.

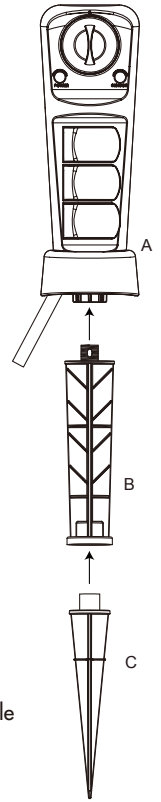

INSTRUCTIONS

SPECIFICATIONS: AWG 14/3 SJTW power cord.
ELECTRICAL RATINGS: 15A/125V/1875W/60Hz.

Installation:

1. Connect the two pieces of the yard stake together by screwing the lower stake (C) into the upper stake (B).
2. Attach the yard stake to the outlet (A) by screwing the stake assembly into the base of the outlet (A). Be sure to firmly tighten the stake assembly to the outlet (A) before installing into the ground.
3. Insert the stake 6 inches into the ground.
 - OPERATION: Once assembled, plug the yard stake into a grounded outlet (total wattage should not exceed 15 amp or 1,875 watts)
 - Lift the rotate the dial counterclockwise to the desired setting.

SELECT	DESCRIPT
OFF	Power Off
ON	Power On
Sensor	On automatically at dusk and off at dawn
2 Hrs	On at dusk, On for 2 hours, then Off
4 Hrs	On at dusk, On for 4 hours, then Off
6 Hrs	On at dusk, On for 6 hours, then Off
8 Hrs	On at dusk, On for 8 hours, then Off

Safety Information

Modifications not approved by the party responsible for compliance will void user's authority to operate the equipment.

CAUTION:

- Risk of fire. Not for permanent installation. Use only with outdoor equipment, Christmas tree, or other seasonal decorative-lighting products having a total of 15 Amp maximum. Do not install or use this product for more than a 90-day period.
- If using Christmas tree or decorative lighting products that are not marked with an amp rating, connect no more than 140 screw-base lamps (C7 or C9) or 12 strings with push-in lamps to this cordset.
- Cordset should be plugged into a GFCI-protected receptacle.
- If using an outdoor-use cord set for an extended period of time (greater than 90 days), consider hard wiring a permanent outdoor-use receptacle rated for year-round use in the area power is needed. Contact a licensed electrician for proper installation of permanent wiring.
- After installation, connector must be kept a minimum of 6 inches above ground.
- SUITABLE FOR INDOOR/OUTDOOR USE – STORE INDOORS WHILE NOT IN USE.
- CAUTION: PLUG INTO GROUND FAULT PROTECTED RECEPTACLE ONLY.

WARNING: Federal Communications Commission Interference Statement

This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

NOTE: Position yard stake away from other light sources. If it is too close to other light sources, or if the photocell is facing a light source other than the sun (such as a porch light or street lamp), the yard stake may shut off outside of the timer setting you chose. If this happens, relocate yard stake or eliminate other light sources. Keep yard stake and power cord out of common walkways to prevent tripping.

Care and Maintenance

- Store indoors in dry location.
- Always unplug when not in use.
- Do not unplug by pulling on cord.

Troubleshooting

Problem	Possible Cause	Corrective Action
Lights do not turn on, even when timer is in "On" position.	Lights are not in "ON" position, lights are not functioning, or timer is not receiving power.	Be sure that lights are functional by plugging them directly into the outlet. Be sure that lights are in "ON" position if they have their own switch. Be sure that the outlet that the timer is plugged into is active.
Lights do not turn off at the requested time.	(1) Check to see that the off position is set correctly on timer dial. (2) Other lights sources can affect the photocell operation. This can delay the lights turning off.	(1) Confirm the dial is in the correct position by carefully listening for the clicking sound. (2) Please move other lights source away from timer to ensure your timer will work properly.

