

 
PET STAIN ERASER™ PORTABLE CARPET CLEANER

3180, 3181, 3182, 3183 SERIES

Warranty	2	Removing & Emptying the Dirty Water Tank	5
What's in the Box?	3	After-Cleaning Care	6
Choosing Your Formula	3	Storing Your Machine	7
Charging the Battery	3	Troubleshooting	7
Positioning the Machine Correctly	4		
Spot Cleaning Carpet & Upholstery	4		

Product Overview

1. Spray Nozzle
2. Charging Port
3. Removable Suction Lens
4. Tank Release Latch
5. Dirty Water Tank
6. Removable Scrub Brush
7. Formula Tank
8. Spray Switch
9. Battery Status Indicator Light
10. Power Switch

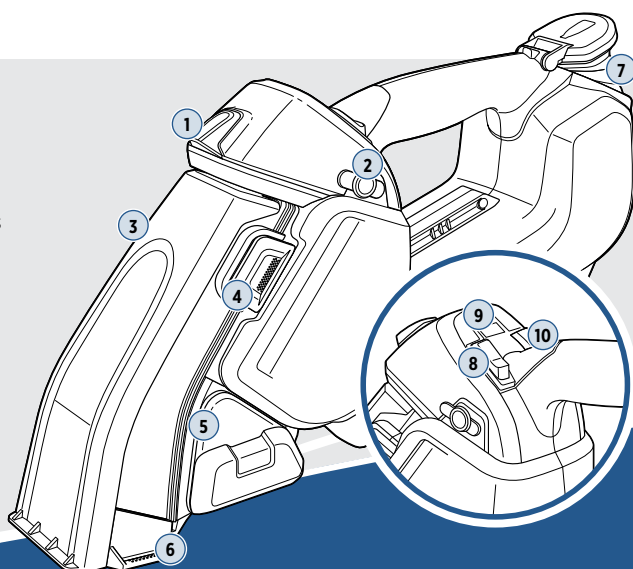

Go online for a comprehensive walkthrough of your new purchase!

This guide has everything you need to get ready for first use, including setting up, using and maintaining your machine, but online you'll find additional resources like tips and troubleshooting, videos, product registration, parts, and more. Go to **support.BISSELL.com**.

IMPORTANT SAFETY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE USING YOUR BISSELL® PET STAIN ERASER™ CORDLESS PORTABLE DEEP CLEANER. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. When using an electrical appliance, basic precautions should be observed, including the following:



WARNING TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts of the appliance and its accessories.
- Use only the type and amount of liquids specified in this guide.
- Unplug charger from outlet when not in use and before servicing.
- Always connect to a proper electrical socket.
- Do not modify plug.
- Do not expose to rain. Store indoors.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in the user guide.
- Use only manufacturer's recommended attachments.
- Do not use with damaged charger, cord or plug.
- Do not immerse in water or liquid.
- If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water; do not attempt to operate it and have it repaired at an authorized service center.
- Do not pull or carry charger by the cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord.
- Keep charger away from heated surfaces.
- Do not unplug charger by pulling on cord.
- To unplug, grasp the plug, not the cord.
- Do not handle charger, including charger plug and charger terminal with wet hands.
- Do not put any object into openings.
- Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Use extra care when cleaning on stairs.
- Keep batteries out of reach of children.
- The battery is to be disposed of safely.
- Turn OFF all controls before plugging or unplugging appliance.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.)
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use appliance in an enclosed space filled with vapors given off by oil-based paint, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Do not use a flammable or combustible liquid.
- Prevent unintentional starting. Ensure the switch is in the OFF-position before picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that can turn the switch on invites accidents.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not use appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C/265°F may cause explosion.
- Follow all charging instructions and do not charge the appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Have servicing performed by a qualified repair person using only identical replacement parts.
- This will ensure that the safety of the product is maintained.
- Do not modify or attempt to repair the appliance except as indicated in the instructions for use and care.
- Keep the temperature range of between 4-40°C/40-104°F when charging battery, storing machine or during use.
- Only use with the following charger; E-teK Model ZD006C100063USE.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- Liquid must not be directed towards equipment containing electrical components.
- Do not immerse. Use only on surfaces moistened by the cleaning process. Use only BISSELL cleaning products intended for use with this machine.
- If the charger supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Battery pack and charger output terminals are not to be short-circuited.
- Do not charge the unit outdoors.
- Do not incinerate the appliance even if it severely damaged. The batteries can explode in a fire.
- The appliance must be disconnected from the supply mains when removing the battery.
- Dispose of used batteries promptly.
- Never put batteries in mouth. If swallowed, contact your physician or local poison control.
- This appliance contains batteries that are only replaceable by skilled persons.
- The battery must be removed from the appliance before it is scrapped.



WARNING This product contains Lithium-Ion rechargeable batteries. DO NOT mix Lithium-Ion batteries with general household waste. According to Federal and State regulations, removal and proper disposal of Lithium-Ion batteries is required. For specific battery disposal instructions please contact Call2Recycle at 877-723-1297 or visit www.call2recycle.org.



SAVE THESE INSTRUCTIONS FOR FUTURE USE

 
 
THIS MODEL IS FOR HOUSEHOLD USE ONLY.

Warranty

↗ 2-Year limited warranty, may vary by state. Visit support.BISSELL.com or call 1-844-383-2630 for complete warranty information.

What's in the Box?

Standard accessories may vary by model. To identify what should be included with your purchase, please refer to the "Carton Contents" list located on the carton top flap.

				
Pet Stain Eraser™ PowerBrush	Charger	Removable Scrub Brush (preinstalled)	Pet Tool (select models)	Trial-Size Formula

Choosing Your Formula

Find more formulas at [BISSELL.com](https://www.bissell.com).

Keep plenty of genuine BISSELL® formula for portable spot cleaning machines on hand so you can clean whenever it fits your schedule.



BISSELL PRO OXY Spot & Stain

 
Permanently removes stains.

BISSELL PET PRO OXY Spot & Stain


Instant and permanent stain removal.

Charging the Battery


If you need additional help charging your battery, head to [support.BISSELL.com](https://support.bissell.com).

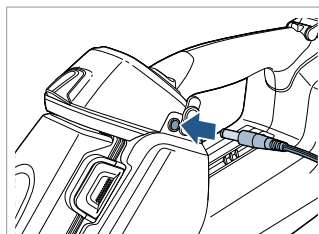

 1. Charge machine before use. Make sure the machine is OFF and the battery status indicator lights are not illuminated. Remove charging port plug and insert charger.

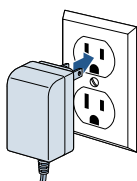

 2. Plug the charger into a wall outlet. The battery status indicator lights will illuminate when charging.
Note: For maximum run time up to 15 minutes, charge for 4.5 hours prior to use.

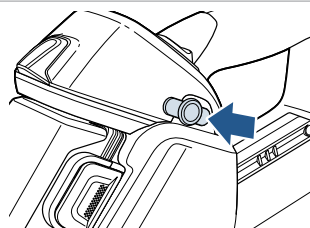

3. After charging, replace charging plug into port.

NOTICE

 
 
 
Use of cleaning formulas which contain lemon or pine oil may damage this appliance and void the warranty. Chemical spot cleaners or solvent-based soil removers also should not be used. These products may react with the plastic materials used in your cleaner, causing cracking or pitting.

Positioning the Machine Correctly



For more helpful tips like this, check out support.BISSELL.com.

To prevent leaking, ensure the machine is always in a horizontal or in an upright position.

Correct Positions

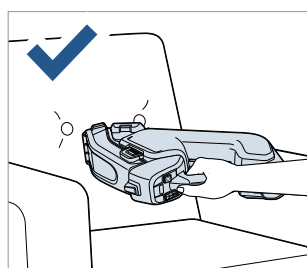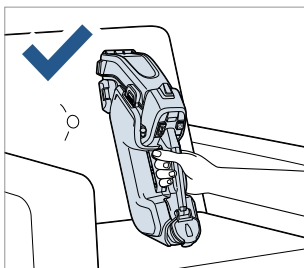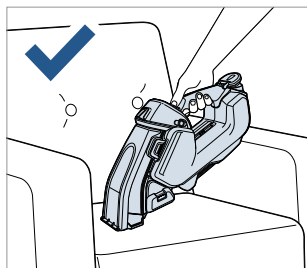


Incorrect Positions

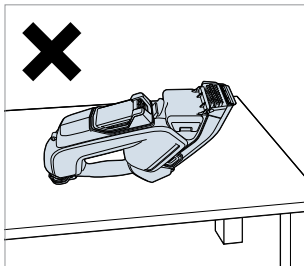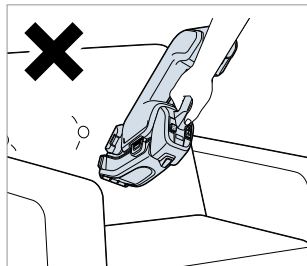  


Spot Cleaning Carpet & Upholstery

 
For additional tips and tricks on using your machine visit support.BISSELL.com.

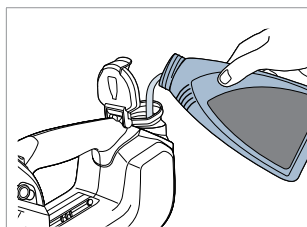

 1. Flip the formula tank cap to open and add formula. Click the cap back into place.

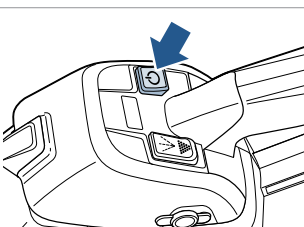

 2. Turn machine ON by pressing the power button.

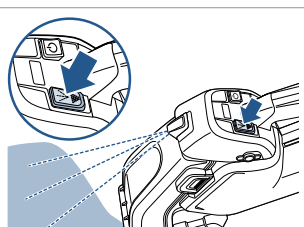




3. Tilt machine forward towards the stain and press the spray button to dispense formula.

CONTINUED ON NEXT PAGE ➡

⚠ WARNING Keep spray away from face. Failure to do so may result in personal injury.






IMPORTANT: Check the manufacturer's tag before cleaning upholstery. "W" or "WS" on the tag means you can use your Pet Stain Eraser™. If tag is coded with an "S" (with diagonal strike-through), or says "Dry Clean Only," do not proceed. If manufacturer's tag is missing or not coded, check with your furniture dealer.

   Spot Cleaning Carpet & Upholstery (continued)

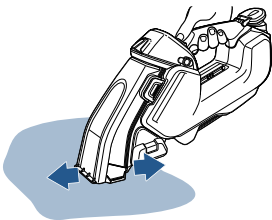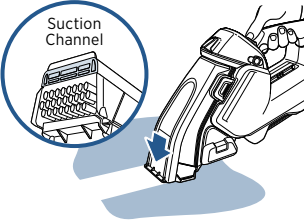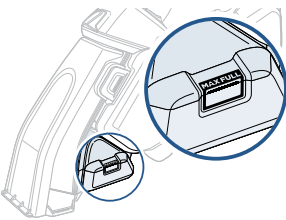		
4. Scrub the area with the brush, keeping the nozzle flat on the ground, as shown. Tip: Turn machine off while scrubbing to allow formula to treat the stain.	5. For maximum suction, firmly press the suction channel down on the cleaning surface. Note: Area may be damp to touch after cleaning.	6. Empty dirty water tank when it reaches the “MAX FULL” line.


Removing & Emptying the Dirty Water Tank

     ➤ We have additional tips for maintaining your machine at support.BISSELL.com.

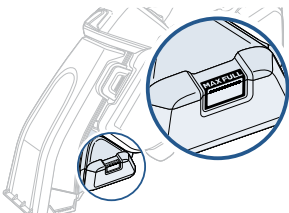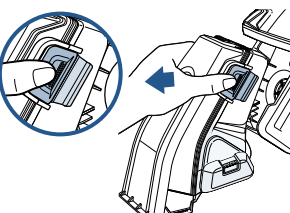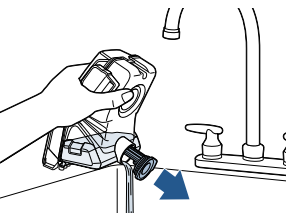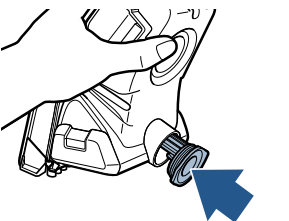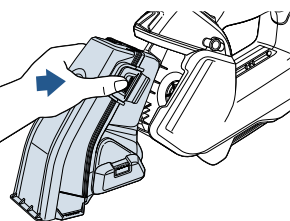
		
1. Empty dirty water tank when it reaches the “MAX FULL” line.	2. Turn machine OFF. Squeeze dirty water tank release latches and pull to remove tank.	3. Pull the dirty water tank plug open and empty. Note: Plug remains attached to tank during emptying.
		
4. Press firmly on center of plug to close the tank.	5. Press the dirty tank back into the machine until it clicks into place.	

After-Cleaning Care

 
For more tips on how to maintain your machine, visit support.BISSELL.com.

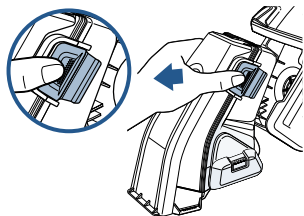

 
1. Squeeze tank release latches and pull to remove tank.

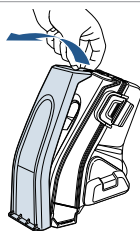

 
2. Release the removable suction lens by raising the latch at the top and pulling outward.

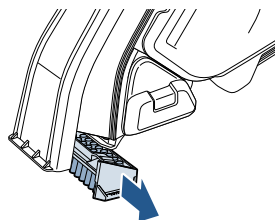

 
3. Empty the dirty water tank prior to removing the brush. Grip tab on brush and gently pull away.

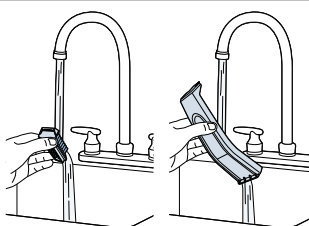

 
4. Rinse the suction lens and brush.

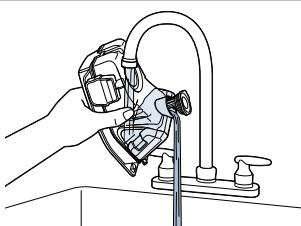

 
5. With the drain plug open, rinse the tank by running water through the front and out through the plug opening.
Note: Plug will not fully remove from tank.

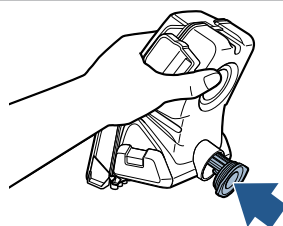

 
6. Allow tank to dry. Push plug back into tank.

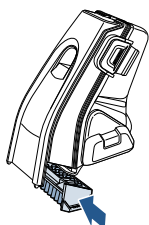

 7. Push brush into opening until it clicks into place.

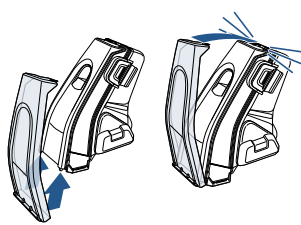

 8. Hook the bottom of the suction lens to the machine and rotate closed until the latch clicks into place

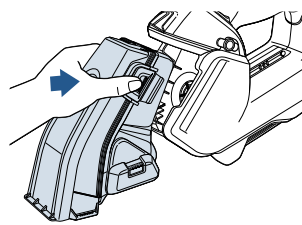

9. Press the dirty tank back into the machine until it clicks into place.

⚠ WARNING To reduce the risk of fire, electric shock or injury, turn power OFF and disconnect from charger before performing maintenance or troubleshooting.

Storing Your Machine

🔧 For more helpful maintenance tips, check out support.BISSELL.com.

Before storing your machine, ensure the dirty water tank is empty. Unused formula may remain inside formula tank between uses. Machine should not be stored on its side. Store your machine in a protected, dry area.

Troubleshooting

🔧 Below are some of the issues you may run into. If you don't see the issue you're experiencing below, visit support.BISSELL.com.

Problem	Possible Cause	Remedies
Machine is not powering ON	Battery is depleted.	Charge machine before use.
Machine is leaking	Dirty water tank plug gasket is dirty.	Clean gasket.
	Dirty water tank and plug are not properly installed.	Remove and reinstall dirty water tank and plug until secured into place.
	Dirty water tank is full.	Empty tank. See "Removing & Emptying the Dirty Water Tank". Machine should not be stored on its side.
	Machine is tilted on its side, back or pointed directly downward.	Ensure machine is in horizontal or upright position.
Machine is not charging	Charger plug/cord not properly connected.	Make sure charger cord is secured into machine and charger plug is inserted fully into a working wall outlet.
Reduced or no spray	Pump not primed.	While the machine is turned ON, press and hold spray trigger for a few seconds.
	Spray nozzle clogged.	Clear debris from the spray nozzle using a paper clip.
	Machine is being used in an incorrect position.	Use machine in horizontal orientation. See "Positioning the Machine Correctly".
Reduced or no suction	Dirty water tank not properly installed.	Reinstall dirty water tank and confirm plug is secure.
	Removable suction lens not properly installed or is clogged.	Remove, clean, and reinstall suction lens. See "After-Cleaning Care".
	Removable suction lens not engaged with the carpet.	Tilt machine forward and press down firmly on the carpet.
	Debris on filter.	Remove debris from red filter behind dirty tank assembly.

Note: Other maintenance or service not included in the manual should be performed by an authorized service representative.

NOTICE

To reduce the risk of a leaking condition, do not store where freezing may occur. Damage to internal components may result.

⚠️ WARNING

To reduce the risk of fire, electric shock or injury, turn power OFF and disconnect from charger before performing maintenance or troubleshooting.



We're Waggin' Our Tails!

BISSELL proudly supports BISSELL Pet Foundation® and its mission to help save homeless pets. When you buy a BISSELL® product, you help save pets, too. We're proud to design products that help make pet messes, odors and pet homelessness disappear.

Visit **BISSELLsavespets.com** to learn more.

But wait, there's more!

Join us online for a complete guide to your new product, including troubleshooting, product registration, parts, and more.

Go to support.BISSELL.com.



REGISTER



INFO



VIDEOS



PARTS



SUPPORT



©2022 BISSELL Inc. All rights reserved.
Part Number 1627493 10/21 RevA

- 
 REGÍSTRESE
- 
 INFO
- 
 VIDEOS
- 
 PIEZAS
- 
 SOPORTE

Pero espere. ¡Aún hay más!
 Visitenos en línea para obtener información completa sobre su nuevo producto, incluidos la solución de problemas, el registro del producto, las piezas y más. [Visite support.bissell.com](http://www.bissell.com/support).

¡Estamos moviendo nuestras colas!
 BISSELL orgullosamente apoya a la BISSELL Pet Foundation® y su misión de ayudar a salvar a las mascotas sin hogar. Cuando compra un producto BISSELL®, también ayuda a salvar mascotas. Estamos orgullosos de diseñar productos que ayudan a hacer desaparecer la suciedad, los olores y la falta de hogar de las mascotas.
 Visite [BISSELLsavespets.com](http://www.bissellsavespets.com) para obtener más información.



Antes de almacenar su máquina, asegúrese de que el tanque de agua sucia esté vacío. La fórmula sin usar puede permanecer dentro del tanque de fórmula entre usos. No se debe almacenar la máquina sobre un lado. Guarde la máquina en un área protegida y seca.

Identificación de fallas

➤ A continuación, hay algunos problemas que tal vez encuentre. Si no ve a continuación el problema que está experimentando, visite support.BISSELL.com.

Problema	Causa posible	Acciones correctivas
No se enciende (ON) la máquina	La batería está agotada.	Cargue la máquina antes de usarla.
La máquina tiene fugas	La junta del tapón del tanque de agua sucia está sucia.	Limpie la junta.
	El tanque de agua sucia y el tapón no están instalados correctamente.	Retire y vuelva a instalar el tanque de agua sucia y el tapón hasta que quede asegurado en su lugar.
	El tanque de agua sucia está lleno.	Tanque vacío Consulte "Extracción y vaciado del tanque de agua sucia". No se debe almacenar la máquina sobre un lado.
	La máquina está inclinada de lado, hacia atrás o apuntando directamente hacia abajo.	Asegúrese de que la máquina esté en posición horizontal o vertical.
La máquina no se está cargando	El enchufe/cable del cargador no está conectado correctamente.	Asegúrese de que el cable del cargador esté asegurado en la máquina y que el enchufe del cargador esté completamente insertado en un tomacorriente de pared que funcione.
Baja intensidad de rocío o sin rocío	La bomba no está cebada.	Mientras la máquina está encendida, presione y mantenga presionado el gatillo de rociado durante unos segundos.
	La boquilla de rociado está tapada.	Limpie la suciedad de la boquilla de rociado usando un clip para papeles.
	Se está utilizando la máquina en una posición incorrecta.	Utilice la máquina en orientación horizontal. Consulte "Posicionamiento correcto de la máquina".
Poca succión o sin succión	No se ha instalado correctamente el tanque de agua sucia.	Vuelva a instalar el tanque de agua sucia y confirme que el tapón esté seguro.
	El lente de succión extraíble no está instalado correctamente o está obstruido.	Retire, limpie y vuelva a instalar el lente de succión. Consulte "Cuidado después de la limpieza".
	El lente de succión extraíble no está acoplado a la alfombra.	Incline la máquina hacia adelante y presione firmemente sobre la alfombra.
	Suciedad en el filtro.	Quite la suciedad del filtro rojo detrás del conjunto del tanque sucio.

Nota: Todo trabajo de mantenimiento o servicio no incluido en el manual deberá ser realizado por un representante de servicio autorizado.

 
 
 
AVISO




Podría resultar en daños a los componentes internos.




Para reducir el riesgo de una condición de fuga, no guarde la unidad donde pueda ocurrir el congelamiento.




ADVERTENCIA

Para reducir el riesgo de incendio, choque eléctrico o lesiones, apague (OFF) y desconecte del cargador antes de efectuar tareas de mantenimiento o identificar fallas.

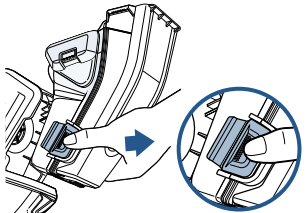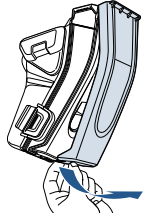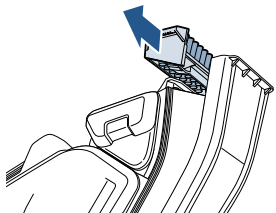	1. Apriete los pestillos de liberación del tanque y tire para quitar el tanque.
	2. Suelte el lente de succión en la parte superior y tirando hacia afuera.
	3. Vacíe el tanque de agua sucia antes de retirar el cepillo. Agarre la lengüeta del cepillo y tire suavemente.

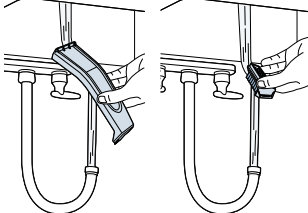 
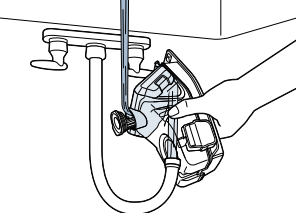 
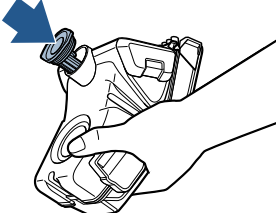 
	4. Enjuague el lente de succión y el cepillo.
	5. Con el tapón de drenaje abierto, enjuague el tanque haciendo correr agua por el frente y hacia afuera por la abertura del tapón. Nota: El tapón no se quita completamente del tanque.
	6. Permita que el tanque seque. Vuelva a colocar el tapón en el tanque.

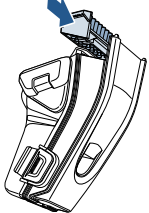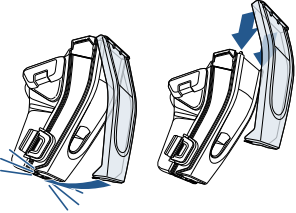  
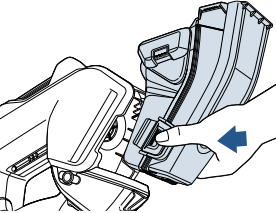 
	7. Empuje el cepillo en la abertura hasta que encaje en su lugar.
	8. Enganche la parte inferior del lente de succión en la máquina y girelo para cerrarlo hasta que el pestillo encaje en su lugar.
	9. Presione el tanque de agua sucia nuevamente dentro de la máquina hasta que encaje en su lugar emitiendo un chasquido.

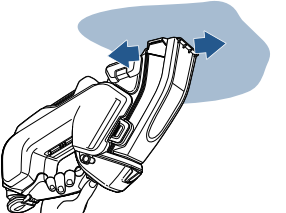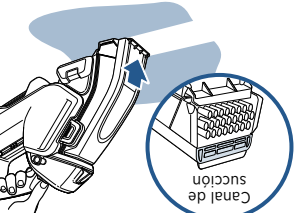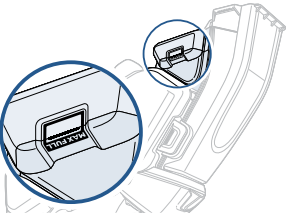   	 Canal de succión	
4. Frote el área con el cepillo, manteniendo la boquilla plana en el suelo, como se muestra. Consejo: Apague la máquina mientras frota para permitir que la fórmula trate la mancha.	5. Para una succión máxima, presione firmemente el canal de succión hacia abajo en la superficie de limpieza. Nota: es posible que el área esté húmeda al tacto después de la limpieza.	6. Vacíe el tanque de agua sucia cuando llegue a la línea "MAX FULL".

Extracción y vaciado del tanque de agua sucia

   Tenemos consejos de mantenimiento adicionales para su máquina en support.BISSELL.com.

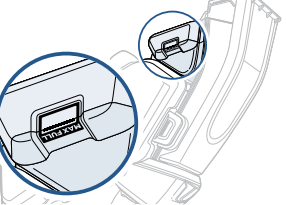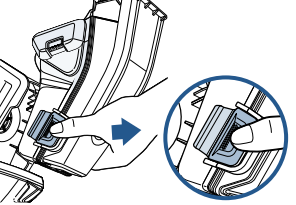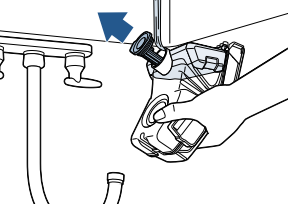		
1. Vacíe el tanque de agua sucia cuando llegue a la línea "MAX FULL".	2. Apague (OFF) la máquina. Apriete los pestillos de liberación del tanque y tire para quitar el tanque.	3. Tire del tapón del tanque de agua sucia para abrir y vacíe. Nota: El tapón permanece conectado al tanque durante el vaciado.

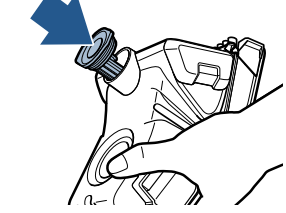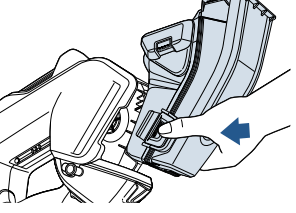  	
4. Presione firmemente en el centro del tapón para cerrar el tanque.	5. Presione el tanque sucio nuevamente dentro de la máquina hasta que encaje en su lugar.

 
¡IMPORTANTE: Compruebe el rótulo del fabricante antes de limpiar tapizados. "W" o "WS" en el rótulo quiere decir que puede usar su Pet Stain Eraser™. Si el rótulo está codificado con una "S" (con una barra diagonal atravesada), o si dice "Dry Clean Only", no use la máquina. Si falta el rótulo del fabricante o si no está codificado, compruebe con el distribuidor de los muebles.

⚠️ ADVERTENCIA


en lesiones personales.
Mantenga el rocío lejos de la cara. Si no se cumple con esto podría resultar

CONTINÚA EN LA SIGUIENTE PÁGINA ➡


1. Gire la tapa del tanque de fórmula para abrir y agregar fórmula. Usando presión coloque la tapa de nuevo en su sitio.

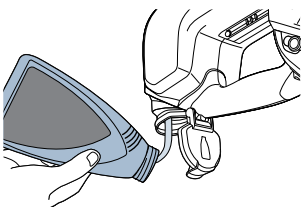

 2. Encienda la máquina presionando el botón de encendido (ON).

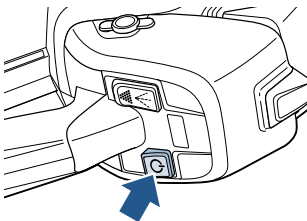


 
3. Inclina la máquina hacia adelante hacia la mancha y presione el botón de rociado para dispensar la fórmula.

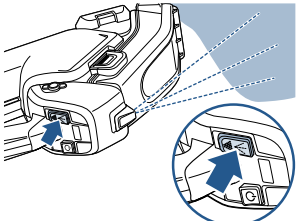




Limpieza de manchas de alfombras y tapicería

➡ Para obtener consejos y trucos adicionales sobre el uso de su máquina visite support.BISSELL.com.

  Posiciones incorrectas

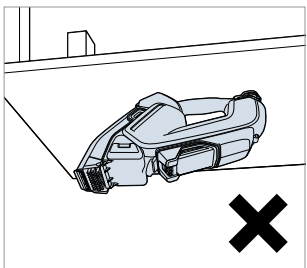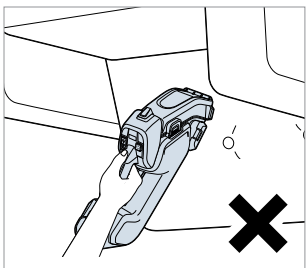

Posiciones correctas

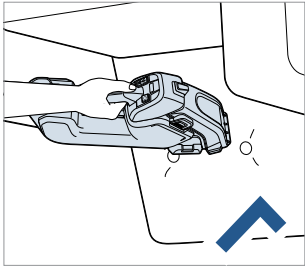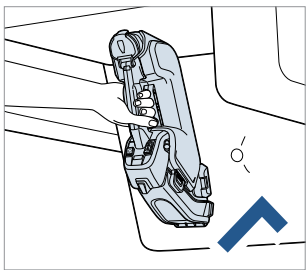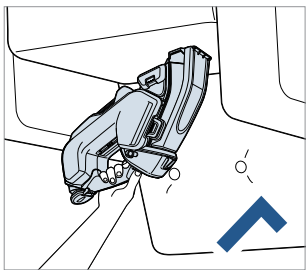   

Para evitar fugas, asegúrese de que la máquina esté siempre en posición horizontal o vertical.

Posicionamiento correcto de la máquina

➡ Para obtener más consejos útiles como este, visit support.BISSELL.com.

¿Qué hay en la caja?
Los accesorios estándar varían de un modelo a otro. Para identificar lo que se debiera haber incluido con su compra, consulte la lista "contenido de la caja" situada en la pestaña superior de la caja.

				
---	---	---	---	---

Selección de la fórmula

➤ Encuentre más fórmulas en [BISSELL.com](https://www.BISSELL.com).

Mantenga a mano abundante cantidad de fórmula auténtica BISSELL® para máquinas portátiles para la limpieza de manchas para que pueda limpiar cuando se ajuste a su horario.



 
BISSELL PET PRO OXY Spot & Stain
Elimina instantáneamente y permanentemente las manchas.




BISSELL PRO OXY Spot & Stain
Elimina permanentemente las manchas.

Carga de la batería


➤ Si necesita ayuda adicional para cargar la batería, diríjase a [support.BISSELL.com](https://www.support.BISSELL.com).

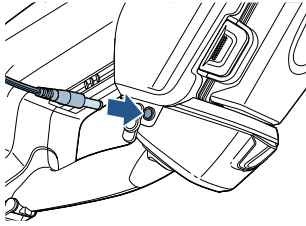

 1. Cargue la máquina antes de usarla. Asegúrese de que la máquina esté APAGADA y que las luces indicadoras de estado de la batería no estén encendidas. Quite el tapón del puerto de carga e inserte el cargador.

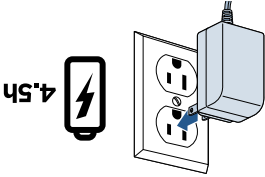

 2. Enchufe el cargador en un tomacorriente de la pared. Las luces indicadoras de estado de la batería se iluminarán **Nota:** Para un tiempo de funcionamiento máximo de hasta 15 minutos, cargue durante 4.5 horas antes de su uso.

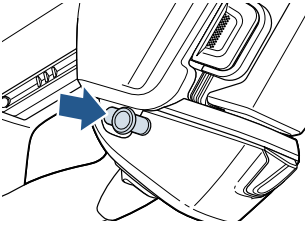

3. Después de cargar, vuelva a colocar el tapón del puerto de carga en el puerto.

AVISO: El uso de fórmulas de limpieza que contengan aceite de limón o pino puede dañar este electrodoméstico y anularán la garantía. Tampoco se debe usar quitamanchas químicos o removedores con base de solvente. Estos productos pueden causar una reacción con los materiales plásticos usados en su limpiadora, causando grietas o picaduras.




PET STAIN ERASER™ LIMPIADORA PORTÁTIL PARA ALFOMBRAS SERIES 3180, 3181, 3182, 3183

Garantía.....	2
¿Qué hay en la caja?.....	3
Selección de la fórmula.....	3
Carga de la batería.....	3
Posicionamiento correcto de la máquina.....	4
Limpieza de manchas de alfombras y tapicería.....	4

Extracción y vaciado del tanque de agua sucia.....	5
Cuidado después de la limpieza.....	6
Almacenamiento de la máquina.....	7
Identificación de fallas.....	7

Información general del producto

 1. Boquilla de rociado
2. Puerto de carga
3. Lente de succión extraíble
4. Cierre de liberación del tanque
5. Tanque de agua sucia
6. Cepillo para fregar extraíble
7. Tanque de fórmula
8. Interruptor de rociado
9. Luz indicadora de estado de la batería
10. Interruptor de encendido

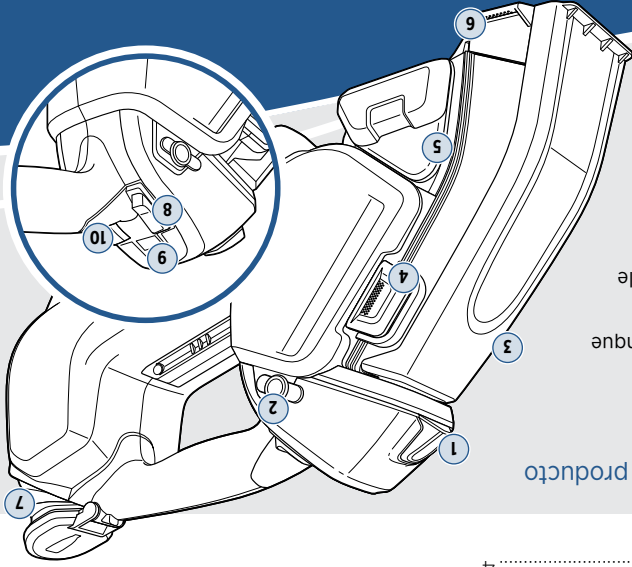

¡Vaya en línea para ver un recorrido exhaustivo de su nueva compra!

Esta guía tiene todo lo que necesita para prepararse para usarla por primera vez, incluida la preparación, el uso y el mantenimiento de su máquina, pero en línea encontrará recursos adicionales como sugerencias e identificación de fallas, videos, registro de productos, piezas y más.

Vaya a support.bissell.com.

