

Usage Instructions

To set up the Lysol No-Touch Hand Soap System:

- Insert 4 AA batteries included in the package. Press tab firmly to close battery door completely
- Remove the sticker from the hand soap refill
- Insert the hand soap refill into the dispenser until you hear it click into place
- Switch on using the on/off switch located on the back of the dispenser
- The red indicator light on front will blink to indicate the dispenser is activated
- When it stops blinking, your No-Touch dispenser is ready to use

To use the Lysol No-Touch Hand Soap System:

- Place your hand underneath the nozzle, making sure your hand is between the nozzle and the indicator light.
- The dispenser will automatically sense your hand and dispense just the right amount of soap

To maintain the Lysol No-Touch Hand Soap System:

- Do not place the dispenser in standing water, under running water, in the dishwasher, or in direct sunlight
- If the dispenser requires cleaning, switch it to OFF, then wipe the dispenser with a damp, non-abrasive cloth and dry thoroughly
- Ensure the lens on the underside of the nozzle is free from soap build-up as this may unintentionally activate the sensor