

# Cuisinart®

## INSTRUCTION BOOKLET



PerfectTemp™ 14-Cup Programmable Coffeemaker

DCC-2800

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

---

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:

1. **READ ALL INSTRUCTIONS.**
2. **Always unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.**
3. Do not touch hot surfaces. Use handles and knobs.
4. To protect against electric shock, do not place cord, plug, or base unit in water or other liquids.
5. This appliance should not be used by or near children or individuals with certain disabilities.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to the nearest Cuisinart Repair Center for examination, repair, and electrical or mechanical adjustment.
7. The use of accessory attachments not recommended by Cuisinart may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always fill water reservoir first, then plug cord into the wall outlet. To disconnect, push the Brew/Off button, then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Snap lid securely onto carafe before serving any beverages.
14. Scalding may occur if the lid is removed during the brewing cycle.
15. The glass carafe is designed for use with this coffeemaker only. It must never be used on the range top.
16. Do not set a hot carafe on a wet or cold surface.
17. Do not use a cracked carafe or a carafe having a loose or weakened handle.
18. Do not clean carafe or heating plate with cleansers, steel wool pads, or other abrasive materials.
19. **WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE THE BASE PANEL. NO USER-SERVICEABLE PARTS ARE INSIDE. REPAIR SHOULD BE DONE ONLY BY AUTHORIZED PERSONNEL.**
20. Do not place cloth beneath coffeemaker or otherwise restrict airflow.
21. Use only the Cuisinart Gold-Tone Commercial Style Filter or standard basket paper filter with this unit. **OTHER GOLD-TONE PERMANENT FILTERS MAY CAUSE THE COFFEEMAKER TO OVERFLOW.**
22. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage, always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.

## SAVE THESE INSTRUCTIONS

## FOR HOUSEHOLD USE ONLY

## WARNING: RISK OF FIRE OR ELECTRIC SHOCK



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of fire or electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## SPECIAL CORD SET INSTRUCTIONS

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Extension cords may be used if care is exercised in their use.

If an extension cord is used, the marked electrical rating of the extension cord must be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

## NOTICE

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

## OPERATING NOTICE

Clogging and backing up of water and/or coffee in the filter basket can occur under any or a combination of any of the following conditions: The use of too finely ground coffee, using two or more paper filters, using the gold-tone filter in conjunction with a paper filter or not properly cleaning coffee grounds from the gold-tone filter, or allowing coffee grounds to spill over the filter.

**Caution:** Never open the filter basket during the brewing cycle, even if no water is draining from the filter basket, because extremely hot water/coffee can spill out from the filter basket and cause injury. If water/coffee is not draining from the filter basket during the brewing cycle, unplug the unit and wait 10 minutes before opening and checking the filter basket.

	<b>WARNING</b> RISK OF FIRE OR ELECTRIC SHOCK DO NOT OPEN	
<b>WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY</b>		

# CONTENTS

Important Safeguards . . . . .	2-3
Important Unpacking Instructions . . . . .	4
The Quest for the Perfect Cup of Coffee . . . . .	4
Features and Benefits . . . . .	5
Control Panel . . . . .	6
Programming Your Coffeemaker . . . . .	7
Before Brewing your First Pot . . . . .	7
Charcoal Water Filter . . . . .	9
Brew Pause Feature . . . . .	9
Cleaning and Maintenance . . . . .	9
Warranty . . . . .	11

## IMPORTANT UNPACKING INSTRUCTIONS

1. Place the box on a large, sturdy, flat surface.
2. Remove the instruction book and any other literature.
3. Turn the box so that the back side of the coffeemaker is down and slide the coffeemaker from the box.
4. After the coffeemaker has been removed, place the box out of the way and lift off the left and right packing inserts.
5. Grasp the carafe by its handle, remove it from the heating plate, and remove the polybag.
6. Remove the polybag covering the coffeemaker.
7. Remove protective label from digital display before first use.

Save all packing materials in case you have to ship the machine in the future.

**KEEP ALL PLASTIC BAGS AWAY FROM CHILDREN.**

## THE QUEST FOR THE PERFECT CUP OF COFFEE

### Element 1: Water

Coffee is 98% water. The quality of that water is as important as the quality of your coffee. If water doesn't taste good from the tap, it won't taste good in your coffee. Cuisinart includes a charcoal water filter to remove chlorine, bad tastes and odors for the purest coffee flavor, every time you brew.

### Element 2: Coffee

While coffee is 98% water, all of the flavor comes from the beans. To achieve the same great taste you enjoy at a coffee bar, you need to use the same quality of coffee. If you choose to grind your own beans, buy them fresh and whole. Buy only about a two-week supply at a time, because once the bean is broken, its flavor degrades quickly.

### Element 3: Grind

The grind is critical for proper flavor extraction. If the grind is too fine, over-extraction and bitterness will result. Too fine a grind may also clog the filter. If grind is too coarse, the water will pass through too quickly and the maximum flavor will not be extracted. When grinding your own beans, we recommend a medium-fine grind.

### Element 4: Proportion

Coffee that is too strong or too weak is always a disappointment. Follow the recommended portions of ground coffee in the instructions under MAKING COFFEE, and later adjust the amount to suit your taste.

# FEATURES AND BENEFITS

## 1. Reservoir Cover

Press-button cover flips back for easy filling.

## 2. Water Reservoir with Water Level Indicator Window (not shown)

## 3. Showerhead (not shown)

Distributes water evenly over coffee, reducing temperature loss as water passes through grounds.

## 4. Charcoal Water Filter Holder

Holds water filter firmly in place.

## 5. Charcoal Water Filter

Charcoal water filter eliminates chlorine, calcium and bad tastes and odors from tap water.

## 6. Filter Basket

Holds a #4 paper filter **OR** a permanent filter.

## 7. Filter Basket Holder (not shown)

## 8. Cuisinart Permanent Gold-Tone Commercial-Style Filter

Eliminates the need for paper filters.

**NOTE:** Some fine grounds may flow through the filter and appear as sediment in the carafe.

## 9. Control Panel

See detailed illustration, page 6.

## 10. Brew Pause™

Stops flow of coffee from basket when carafe is removed (20 seconds max) from the heater plate, so a cup can be poured mid-brew.

## 11. 14-Cup Glass Carafe

The easy-pour, large 14-cup carafe has an ergonomic handle and brewed coffee markings for two to fourteen cups.

## 12. Ready Tone (not shown)

Signals the end of the brew cycle with five beeps.

## 13. Cord Storage (not shown)


## 14. Power Loss Back-up System (not shown)

One-minute protection in case a breaker trips, the unit is unplugged, or the power fails. It holds all programmed information, including time of day, Auto On time and Auto Off time.

## 15. Measuring Scoop

## 16. BPA Free (not shown)

All parts that come in contact with coffee or liquids are BPA free.

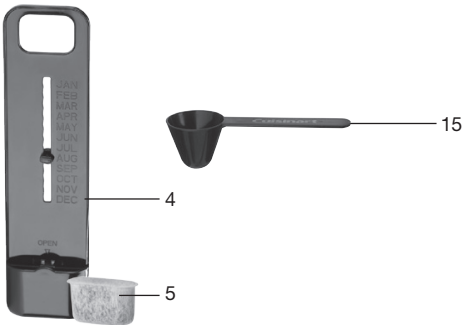

# GETTING TO KNOW YOUR CONTROL PANEL

Detailed programming and use instructions are on pages 7 and 8.



## 1. Prog/Auto On Button

Select to program Auto On time. Coffeemaker can be programmed to automatically start brewing up to 24 hours in advance. Select to automatically start brewing coffee at the time you've programmed.

## 2. Hour and Minute Buttons

Use to set hours and minutes for time of day, Auto On, and Auto Off time.

## 3. Digital Clock Display

Displays time of day, Auto On, and Auto Off times and brew settings.

### A. Brewing

☕ appears during brewing.

### B. Regular and Bold Favor Settings

REG indicates regular flavor settings. BOLD indicates bold flavor setting.

### C. 1-4 Cup Setting

Indicates 1-4 cup setting.

### D. Clean

Will appear when it is time to decalcify coffeemaker.

### E. Program Set Icon/Auto On

⌚ will appear when programming coffeemaker. Both ⌚ and AUTO will appear when Auto On is set.

### F. Auto Off/Keeps Warm

☕ will appear when Auto Off is set.

## 4. Brew/Off/Auto Off

Use to turn your coffeemaker on and off. Use the Auto off feature to shut off the coffeemaker at a preset time, anywhere from 0 to 4 hours.

## 5. Self-Clean Setting

Indicates time to clean coffeemaker to remove calcium buildup.

## 6. 1-4 Cup Setting

Improves extraction, flavor and temperature when brewing fewer than 5 cups.

## 7. Strength Selector

Regular and Bold buttons let you choose the intensity of coffee flavor you prefer.

## 8. Audible Tone (not shown)

A tone sounds 5 times when brew cycle is complete (coffee may continue to stream from the filter for a few seconds after tone).

---

# PROGRAMMING YOUR COFFEEMAKER

## SETTING THE CLOCK

When the coffeemaker is plugged in, 12:00 will appear until you set the time.

### Hold down the Hour or Minute button.

The clock will begin flashing. Press either button to select the desired time. Hold buttons down to scroll through the digits or press and release to advance one digit at a time. When scrolling, the numbers will advance slowly and then speed up. When the number displayed approaches the desired time, press and release to advance one digit at a time. Be sure the PM indicator is on if a PM time is desired.

## SETTING THE AUTO ON TIME

### 1. Press and hold the Prog/Auto On button for 2 seconds

The digital display will flash the default time (12:00PM). Follow directions under SETTING THE CLOCK (above) to program your start-brew time.

### 2. Set preferences

- Push the 1-4 cup button if you are brewing fewer than 5 cups. The 1-4 indicator will be shown on the digital display.
- Press Regular or Bold button to select coffee flavor. The flavor setting will be shown on the digital display.

### 3. Once desired Auto On time and preferences are set...

Auto On setting mode will be exited automatically after 5 seconds.

### 4. To activate Auto On mode

Press the Prog/Auto On button once. The Auto On indicator and program indicator will be shown in digital display and the LED light will illuminate blue.

**NOTE:** To cancel Auto On setting, press the Prog/Auto On button once. The LED light will go off.

## SETTING THE AUTO OFF TIME

### 1. Press and hold the Auto Off button for 2 seconds.

The digital display will flash the program default time at 2:00. Follow directions under SETTING THE CLOCK to program your coffeemaker to shut off from 0 to 4 hours after brew cycle is finished.

### 2. To exit/confirm Auto Off time setting:

Do not touch any buttons. Auto Off mode will be exited automatically after 5 seconds.

## BEFORE BREWING YOUR FIRST POT OF COFFEE

During the manufacturing process, dust can get trapped in your coffeemaker. We recommend flushing out the system before brewing your first pot of coffee. Simply fill the reservoir and power on the unit. (See steps #2, #4 and #6 in MAKING COFFEE instructions, below). **DO NOT ADD COFFEE!**

Once you've done that, brew a pot of real coffee and get ready to enjoy Cuisinart at its best!

## MAKING COFFEE

Follow instructions in **BEFORE BREWING YOUR FIRST POT OF COFFEE** above.

### 1. Insert charcoal water filter

Follow directions for the preparation and insertion of the filter on page 9.





---

## 2. Fill the water reservoir

Open the reservoir cover by pressing the button on top cover. Pour in the desired amount of water using the water level indicator located at the side of the coffeemaker.



## 3. Add the ground coffee

Press button on top cover to access the brew basket. Insert a #4 paper filter **OR** permanent filter. Be sure that the paper filter is completely open and fully inserted in the basket. It may help to fold and flatten the seams of a paper filter beforehand. Add 1 level scoop of ground coffee per cup. Adjust the amount according to taste.



**NOTE:** The maximum capacity for ground coffee is 15 tablespoons for this coffeemaker. Exceeding this amount may cause overflow if the coffee is too finely ground.

## 4. Before brewing coffee

Make sure the glass carafe is in position on the heating plate and the top cover is closed. Plug the cord into an electrical outlet.

## 5. Set preferences

a. Press the 1-4 cup button once, if you are brewing fewer than 5 cups. The 1-4 cup setting will be shown in the digital display.

The digital display will show the 1-4 cup setting for 30 seconds.

b. Press the Regular/Bold button to select flavor setting. The digital display will show the flavor setting for 30 seconds.

**NOTE: Preferences can also be set after pressing the Brew/Off button.**

Press the Brew/Off button once. The digital display will show the latest 1-4 cups and Regular/Bold flavor settings. To change 1-4 cup setting press the 1-4 cup button once. The 1-4 indicator will appear in the digital display. To change the strength setting press the Regular/Bold button once. The updated strength indicator will be shown in the LCD display.

\*1-4 cup and Regular/Bold settings cannot be changed during brewing.

\*Features will remain at selected settings until you change them.

## 6. Power unit

Once preferences are set, coffeemaker will begin brewing within 5 seconds after last button is pressed.

## 7. After brewing

When the brewing cycle has been completed, five beeps will sound. Coffee will continue to stream from the filter for several seconds.

Once the coffee has finished brewing, stir it before serving to blend the flavors. The coffee at the bottom of the carafe will be somewhat stronger than the coffee at the top.

Note: Reservoir cover may be hot during and directly after brewing. Wait at least 10 minutes before opening.



## CHARCOAL WATER FILTER


Your coffeemaker comes with a charcoal water filter that eliminates chlorine, bad tastes and odors from tap water.

### Inserting the Water Filter

- Remove the filter from polybag and soak it, fully immersed, in cold tap water for 15 minutes.
- Lift the water filter holder out of the water reservoir.
- Press down on the filter compartment and pull toward you to open.
- Place filter into the holder and snap it closed. Be careful – improper placement can tear the filter skin.
- Flush filter by running cold tap water through holes in bottom of compartment for 10 seconds.
- Allow the filter to drain completely.
- Slide tab into position below the current month
- Slide the water filter holder back into the channel in the water reservoir, pushing it down to the base of the unit.

**NOTE:** We recommend changing the water filter every 60 days or after 60 uses, and more often if you have hard water.

Replacement filters can be purchased in stores, by calling Cuisinart Customer Service, or at [www.cuisinart.com](http://www.cuisinart.com).

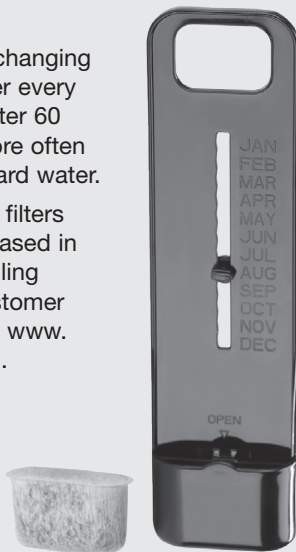

## Brew Pause™ Feature

This feature interrupts the flow of coffee from the basket to let you pour that first cup mid-brew. Because the flavor profile of coffee brewed at the start of a cycle differs from that brewed towards the end, be aware that using this feature will weaken the flavor strength of the finished pot.

**NOTE:** Removing carafe for more than 20 seconds may cause filter basket to overflow.

## CLEANING AND MAINTENANCE

Always turn coffeemaker off and remove the plug from the electrical outlet before cleaning.

Lift up the reservoir cover. Remove and discard the paper filter and ground coffee. The filter basket can be washed in warm, soapy water and rinsed thoroughly, or cleaned in the upper rack of the dishwasher. Dry all parts after use.

**Do not put any water in the unit once the filter basket has been removed. Wipe the area under the filter basket with a damp cloth.**

Remove the carafe from the heating plate. Discard any remaining coffee. The carafe and lid can be washed in warm, soapy water and rinsed thoroughly, or placed in a dishwasher. The carafe and carafe lid should be placed on the upper rack only.

Do not use any scouring agents or harsh cleansers on any part of the coffeemaker.

Never immerse base unit in water or other liquids. To clean base, simply wipe with a clean, damp cloth and dry before storing. Fingerprints and other blemishes on the housing can be washed off with soap and water or a nonabrasive cleaning solution. Wipe heating plate with a clean, damp cloth. Never use rough, abrasive materials or cleansers to clean the heater plate. Do not dry the inside of the water reservoir with a cloth, as lint may remain.

---

## Maintenance

Any other servicing should be performed by an authorized service representative.

### Decalcification

Decalcification refers to the removal of calcium deposits that form over time on the metal parts of the coffeemaker.

For best performance from your PerfectTemp™ Coffeemaker, decalcify the base unit from time to time. The frequency depends upon the hardness of your tap water and how often you use the coffeemaker. The flashing Clean light will indicate when you should clean your coffeemaker.

**NOTE:** Before decalcifying your coffeemaker, remember to remove the charcoal water filter from the water filter holder located in the water reservoir.

If the Clean sign in the digital display and the Clean LED indicator light begins to flash when the coffeemaker is turned on, it is telling you that the calcium buildup is interfering with the functioning of your coffeemaker and the flavor of your coffee. To clean, fill the water reservoir to capacity with a mixture of  $\frac{1}{3}$  white vinegar and  $\frac{2}{3}$  water. Press the Clean button. When the Clean LED indicator glows, turn the coffeemaker on by pressing the Brew/Off button. The Clean LED will shine steadily. The coffeemaker is now in Clean mode. One cycle should be sufficient to adequately clean the coffeemaker. When the cycle is completed and the five beeps sound, the coffeemaker will shut off. Turn the coffeemaker on to see if the Clean sign and Clean LED continue to flash. If they do, turn coffeemaker off and then repeat the cleaning procedure with a fresh solution of vinegar and water.

If the Clean sign and Clean LED no longer flash, turn the coffeemaker off and then run one cycle of fresh, cold water through the unit before using the unit again to brew coffee.

## Notes on the Clean Function

Pressing the Clean button cancels all other settings. If it is pressed accidentally, press it again to return the coffeemaker to all its previous settings. Pressing Brew/Off will also exit the Clean mode and turn the coffeemaker off.

---

# WARRANTY

## Limited Three-Year Warranty

This warranty is available to consumers only. You are a consumer if you own a Cuisinart® PerfectTemp™ 14-Cup Programmable Coffeemaker that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners. We warrant that your Cuisinart® PerfectTemp™ 14-Cup Programmable Coffeemaker will be free of defects in materials and workmanship under normal home use for 3 years from the date of original purchase.

We recommend that you visit our website, [www.cuisinart.com](http://www.cuisinart.com) for a fast, efficient way to complete your product registration. However, product registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

### CALIFORNIA RESIDENTS ONLY

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (A) to the store where it was purchased or (B) to another retail store that sells Cuisinart products of the same type. The retail store shall then, according to its preference, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If neither of the above two options results in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility, if service or repair can be economically accomplished. Cuisinart and not the consumer will be responsible for the reasonable cost of such service, repair, replacement, or refund for nonconforming products under warranty. California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair or, if necessary, replacement by calling our Consumer Service Center toll-free at 800-726-0190. Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling for such nonconforming products under warranty.

### BEFORE RETURNING YOUR CUISINART PRODUCT

If your PerfectTemp™ 14-Cup Programmable Coffeemaker should prove to be defective within the warranty period, we will repair or, if we think necessary, replace it. To obtain warranty service, please call our Consumer Service Center toll-free at 1-800-726-0190 or write to:

Cuisinart, 7811 North Glen Harbor Blvd, Glendale, AZ 85307. To facilitate the speed and accuracy of your return, please enclose \$10.00 for shipping and handling of the product, along with proof of purchase. (California residents need only supply proof of purchase and should call 1-800-726-0190 for shipping instructions.) Be sure to include your return address, description of the product's defect, product serial number, and any other information pertinent to the return. Please pay by check or money order. **NOTE:** For added protection and secure handling of any Cuisinart product that is being returned, we recommend you use a traceable, insured delivery service. Cuisinart cannot be held responsible for in-transit damage or for packages that are not delivered to us. Lost and/or damaged products are not covered under warranty.

Your Cuisinart® PerfectTemp™ 14-Cup Programmable Coffeemaker has been manufactured to the strictest specifications and has been designed for use only in 120-volt outlets and only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by attempted use of this unit with a converter, as well as use with accessories, replacement parts or repair service other than those authorized by Cuisinart. This warranty does not cover any damage caused by accident, misuse, shipment or other than ordinary household use. This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so these exclusions may not apply to you. You may also have other rights, which vary from state to state.

**Important:** If the nonconforming product is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the servicer to call our Consumer Service Center at 1-800-726-0190 to ensure that the problem is properly diagnosed, the product is serviced with the correct parts, and to ensure that the product is still under warranty.

# Cuisinart®

SAVOR THE GOOD LIFE®



Food Processors



Blenders



Griddlers



Cookware



Tools and Gadgets

Cuisinart offers an extensive assortment of top quality products to make life in the kitchen easier than ever. Try some of our other countertop appliances, cookware, tools and gadgets.

**[www.cuisinart.com](http://www.cuisinart.com)**

©2012 Cuisinart  
150 Milford Road  
East Windsor, NJ 08520  
Printed in China  
11CE121600

Trademarks or service marks of third parties used herein are the trademarks or service marks of their respective owners.

F IB-10685A

Version no.: DCC2800 IB-10685A  
 IB Size: 152mm(W) x 229mm(H)  
 Die Cut: NEW  
 Material: COVER:157gsm matt art paper  
INSIDE:120gsm art paper  
 Coating: gloss varnishing in cover  
 Colors(Cover): 4C+1C(BLACK)  
 (Inside): 1C+1C(BLACK)  
 Date: NOV/02/2011 Co-ordinator: Astor You/Jason Wang  
 Revise Ver:F DCC2800 IB-10685A (0.0) Operator: HUAN

 **宝发柯式印刷有限公司**

Tel: 0769-87720314 87886328 Fax: 0769-87720324  
 E-MAIL: pofatprepress@pofat.com

